


BL-570
BL-575

IR Ingersoll-Rand®

Service Manual

BL-570 (S/N 570611001 & Above)
BL-575 (S/N 572011001 & Above)

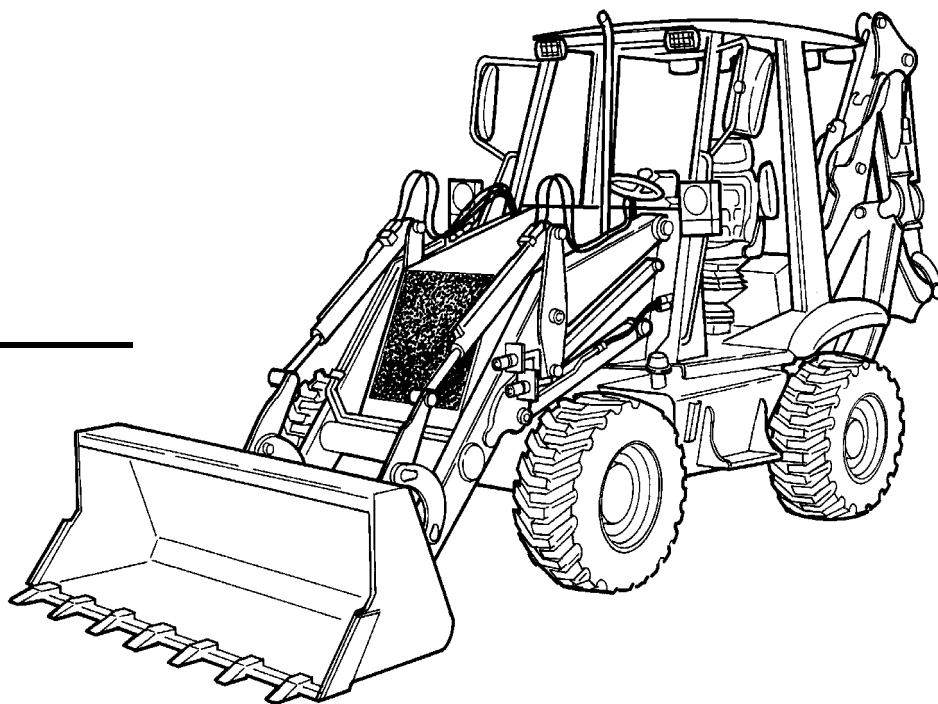

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

IR Ingersoll-Rand.

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
AIR CLEANER SERVICE	10-01	HYDROSTATIC DRIVE MOTOR	30-01
ALTERNATOR	60-01	HYDROSTATIC PUMP	30-01
ALTERNATOR BELT	10-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
ARM CYLINDER	20-01		
ARM	50-01	INSTRUMENT PANEL.....	60-01
AXLE TOE-IN.....	10-01		
		LOADER BACKHOE SPECIFICATIONS.....	SPEC-01
BACKHOE BOOM LOCK.....	10-01	LOADER BACKHOE TORQUE	SPEC-01
BACKHOE CONTROL VALVE	20-01	LOADER CONTROL VALVE	20-01
BATTERY	60-01	LIFT ARMS	50-01
BOB-TACH.....	50-01	LIFT ARM STABILIZER	50-01
BOB-TACH HAND LEVER.....	10-01	LIFT ARM SUPPORT DEVICE.....	10-01
BOOM	50-01	LIFT CYLINDER	20-01
BOOM CYLINDER	20-01	LIFTING AND BLOCKING THE LOADER	
BRAKE CALIPER	40-01	BACKHOE	10-01
BUCKET	50-01	LIGHTS.....	60-01
BUCKET CYLINDER	20-01	LUBRICATING THE LOADER BACKHOE	10-01
CENTER FLOOR PANEL	50-01	MAIN RELIEF VALVE	20-01
CONVERSIONS	SPEC-01	MUFFLER.....	70-01
DRIVE COUPLER.....	70-01	OIL COOLER.....	30-01
DRIVESHAFT	40-01	OPERATOR CAB	50-01
DROP BOX	40-01	OPERATOR SEAT	50-01
ELECTRICAL SYSTEM INFORMATION	60-01	PARKING BRAKE.....	40-01
ENCLOSED CAB	50-01	PORT RELIEF VALVE	
ENGINE	70-01	(BACKHOE CONTROL VALVE)	20-01
ENGINE COMPONENTS AND TESTING	70-01	PORT RELIEF VALVE	
ENGINE COOLING SYSTEM.....	10-01	(LOADER CONTROL VALVE).....	20-01
ENGINE COVER	10-01, 50-01		
ENGINE LUBRICATION SYSTEM.....	10-01	RADIATOR	70-01
ENGINE SIDE COVERS.....	50-01	REAR AXLE	10-01, 40-01
ENGINE SPECIFICATIONS.....	SPEC-01	RECONDITIONING THE ENGINE	70-01
ENGINE SPEED CONTROL	70-01		
		SERVICE SCHEDULE	10-01
FENDER	50-01	STABILIZER	50-01
FLOOR PANELS.....	50-01	STABILIZER CYLINDER	20-01
FLYWHEEL	70-01	STEERING CYLINDER	20-01
FLYWHEEL HOUSING	70-01	STEERING PUMP	20-01
FRONT AXLE	10-01, 40-01	STEERING VALVE	20-01
FRONT AXLE PIVOT FRAME	50-01	STARTER	60-01
FUEL LEVEL SENDER.....	60-01	SWING CYLINDER	20-01
FUEL SYSTEM	10-01	SWING FRAME	50-01
FUEL TANK.....	50-01		
		TILT CYLINDER	20-01
GEAR PUMP	20-01	TIRE MAINTENANCE	10-01
GRILL.....	50-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
GRILL FRAME	50-01	TOWING THE LOADER BACKHOE	10-01
		TRANSPORTING THE LOADER BACKHOE.....	10-01
HYDRAULIC FILTER HOUSING	20-01	TRAVEL PEDAL	20-01
HYDRAULIC FLUID RESERVOIR.....	20-01	TROUBLESHOOTING	40-01, 70-01
HYDRAULIC SYSTEM INFORMATION.....	20-01	TURBOCHARGER	70-01
HYDRAULIC/HYDROSTATIC FLUID			
SPECIFICATIONS	SPEC-01	X-CHANGE™	50-01

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS FOR INGERSOLL RAND LOADER BACKHOE AND ATTACHMENTS.....	V
SERIAL NUMBER LOCATION	VII
FIRE PREVENTION	VI
DELIVER REPORT.....	VII
INGERSOLL RAND IDENTIFICATION.....	VIII
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

SPECIFICATIONS