

Utility Vehicle 2200




Bobcat®

Service Manual



S/N 235311001-D to 235312999-D
S/N 235211001-G to 235212999-G

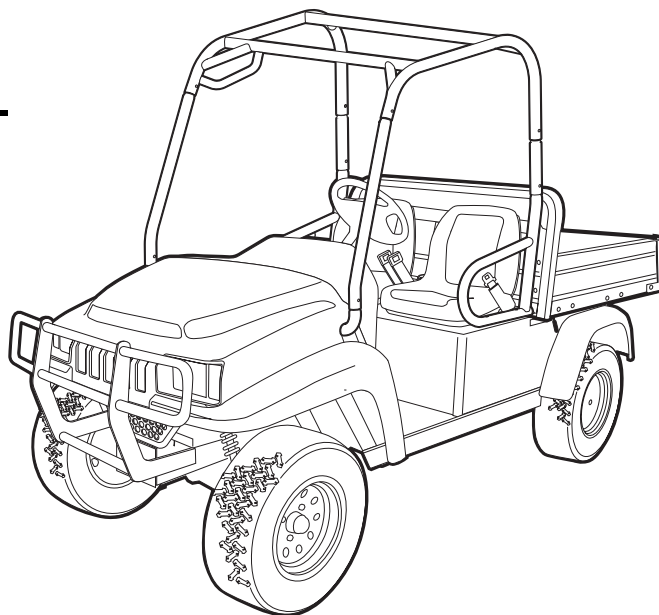

CONTENTS

SECTION 1 – SAFETY

General Warning	1-1
-----------------------	-----

SECTION 2 – VEHICLE SPECIFICATIONS

SECTION 3 – GENERAL INFORMATION

General Information	3-1
Model Identification	3-1
Storage	3-2
Preparing the Vehicle for Extended Storage	3-2
Returning the Stored Vehicle to Service	3-3

SECTION 4 – BODY AND TRIM

Cleaning the Vehicle	4-1
Seat Cleaning	4-1
Front Body Repair	4-2
Abrasions and Haze	4-2
Light Scratches	4-2
Large Scratches and Abrasions	4-2
Front Body Components	4-2
Instrument Panel Removal	4-2
Instrument Panel Installation	4-4
Dashboard Removal	4-4
Dashboard Installation	4-4
Front Body Removal	4-5
Front Body Installation	4-5
Front Fender Removal	4-5
Front Fender Installation	4-5
Roll-Over Protective Structure (ROPS)	4-5
ROPS Removal	4-6
ROPS Installation	4-6

Seat	4-7
Seat Removal	4-7
Seat Adjustment	4-7
Seat Installation	4-7
Seat Frame Removal	4-7
Seat Frame Installation	4-7
Safety Belts	4-8
Safety Belt Removal	4-8
Safety Belt Installation	4-8
Cargo Bed With Electric Lift	4-9
Testing the Bed Lift Motor	4-9
Bed Lift Motor Removal	4-9
Bed Lift Motor Installation	4-9
Cargo Bed Removal	4-10
Cargo Bed Installation	4-10
Rear Fender	4-10
Rear Fender Removal	4-10
Rear Fender Installation	4-10
Floor Mat	4-11
Floor Mat Removal	4-11
Floor Mat Installation	4-11

SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES

Accelerator Pedal	5-1
Accelerator Pedal Removal	5-1
Accelerator Pedal Installation	5-2
Accelerator Pedal and RPM Adjustment	5-2
Brake Pedal	5-3
Brake Pedal Removal	5-3
Brake Pedal Installation	5-3
Brake Pedal Adjustment	5-4
Park Brake Pedal	5-4
Park Brake Pedal Removal	5-4
Park Brake Pedal Installation	5-4
Park Brake Cable Installation	5-5
Park Brake Cable Adjustment	5-5

SECTION 6 – HYDRAULIC AND PARK BRAKE SYSTEMS

Brake System Inspection	6-1
Brake System Troubleshooting	6-3