

[Click here to get the complete manual](#)

**Utility Vehicle  
2200  
2200S  
2300**




**Bobcat®**

**Service  
Manual**



S/N A59Z11001 & ABOVE (2200 DIESEL)  
S/N A5KR11001 & ABOVE (2200 DIESEL) HOM.  
S/N A59Y11001 & ABOVE (2200 GASOLINE)  
S/N A5A111001 & ABOVE (2200S DIESEL)  
S/N A5A011001 & ABOVE (2200S GASOLINE)  
S/N A59W11001 & ABOVE (2300 DIESEL)

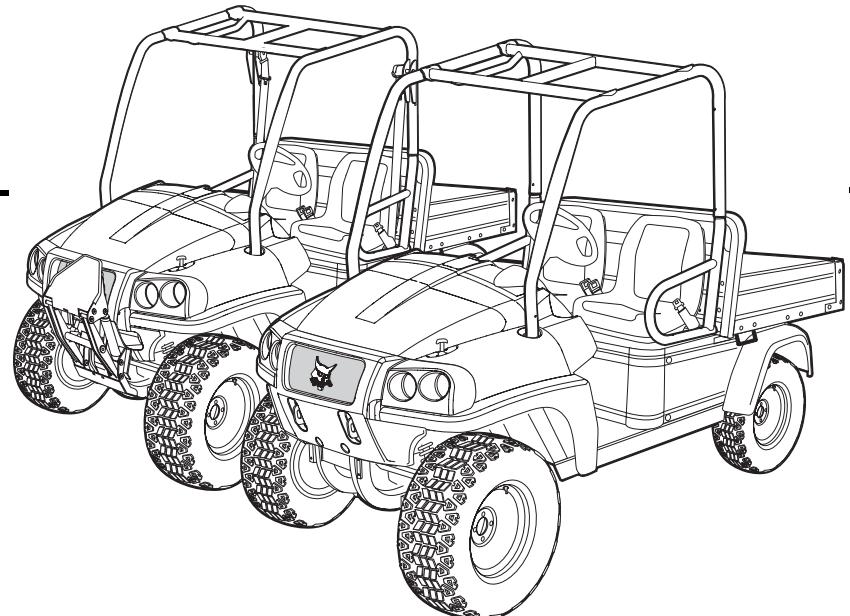

# CONTENTS

---

## SECTION 1 – SAFETY

---

General Warning .....	1-1
-----------------------	-----

## SECTION 2A – VEHICLE SPECIFICATIONS: HONDA GAS & KUBOTA DIESEL POWERED

---

2200 and 2200S Specifications .....	2a-1
2300 Specifications .....	2a-3

## SECTION 2B – VEHICLE SPECIFICATIONS: KAWASAKI GAS & KUBOTA DIESEL POWERED

---

2200 and 2200S Specifications .....	2b-1
2200 Homologated Specifications .....	2b-3
2300 Specifications .....	2b-5

## SECTION 3 – GENERAL INFORMATION

---

General Information .....	3-1
Model Identification .....	3-1
Engine Serial Number Locations .....	3-2
Gasoline EngineS .....	3-2
Diesel Engine .....	3-2
Storage .....	3-2
Preparing the Vehicle for Extended Storage .....	3-3
Returning the Stored Vehicle to Service .....	3-4
Using A Booster Battery (Jump Starting) .....	3-5

## SECTION 4 – BODY AND TRIM

---

Cleaning the Vehicle .....	4-1
Seat Cleaning .....	4-1
Front Body Repair .....	4-2
Light Scratches .....	4-2
Abrasions and Haze .....	4-2
Large Scratches and Abrasions .....	4-2

Front Body Components .....	4-3
Instrument Panel Removal .....	4-3
Instrument Panel Installation .....	4-3
Front Fascia Removal .....	4-4
Front Fascia Installation .....	4-4
Hood Removal .....	4-4
Hood Installation .....	4-4
Center Cowl Panel Removal .....	4-4
Center Cowl Panel Installation .....	4-5
Side Cowl Panel (Fender) Removal .....	4-5
Side Cowl Panel (Fender) Installation .....	4-5
Front Fender Flare Removal .....	4-6
Front Fender Flare Installation .....	4-6
Roll-Over Protective Structure (ROPS) .....	4-6
ROPS Removal .....	4-7
ROPS Installation .....	4-8
Seat .....	4-9
Seat Removal .....	4-9
Seat Adjustment .....	4-9
Seat Installation .....	4-9
Seat Support Removal .....	4-10
Seat Support Installation .....	4-10
Safety Belts .....	4-10
Safety Belt Removal .....	4-10
Safety Belt Installation .....	4-11
Cargo Bed – Electric Lift .....	4-11
Testing the Bed Lift Motor .....	4-11
Bed Lift Motor Removal .....	4-11
Bed Lift Motor Installation .....	4-12
Cargo Bed Removal .....	4-12
Cargo Bed Installation .....	4-12
Cargo Bed – Manual Lift .....	4-13
Cargo Bed Removal .....	4-13
Cargo Bed Installation .....	4-13
Rear Fender .....	4-15
Rear Fender Removal .....	4-15
Rear Fender Installation .....	4-15
Floor Mat .....	4-15
Floor Mat Removal .....	4-15
Floor Mat Installation .....	4-15

## **SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES**

---

Accelerator Pedal .....	5-1
Accelerator Pedal Removal .....	5-1
Accelerator Pedal Installation .....	5-2
Accelerator Pedal and RPM Adjustment .....	5-2
Brake Pedal .....	5-3
Brake Pedal Removal .....	5-3
Brake Pedal Installation .....	5-3
Brake Pedal Adjustment .....	5-4
Park Brake Pedal .....	5-4
Park Brake Pedal Assembly Removal .....	5-4
Park Brake Pedal Assembly Installation .....	5-4

## **SECTION 6 – HYDRAULIC AND PARK BRAKE SYSTEMS**

---

Brake System Inspection .....	6-1
Brake System Troubleshooting .....	6-3
Brake Pads and Caliper .....	6-5
Front Brake Pad and Caliper Removal .....	6-5
Front Brake Pad and Caliper Installation .....	6-7
Rear Brake Pad and Caliper Removal .....	6-8
Rear Brake Pad and Caliper Installation .....	6-9
Brake Disc and Hub .....	6-10
Front Wheel Disc and Hub Removal .....	6-10
Front Wheel Disc and Hub Installation .....	6-14
Rear Wheel Disc Removal .....	6-15
Rear Wheel Disc Installation .....	6-16
Hydraulic Line Replacement .....	6-17
Front Brake Line Removal .....	6-17
Front Brake Line Installation .....	6-17
Rear Brake Line Removal .....	6-18
Rear Brake Line Installation .....	6-19
Master Cylinder and Reservoir .....	6-20
Filling the Hydraulic System .....	6-20
Reservoir Removal .....	6-20
Reservoir Installation .....	6-20
Master Cylinder Removal .....	6-21
Master Cylinder Installation .....	6-21
Bleeding the Hydraulic Brake System .....	6-22
Bleeding Brakes on a DOT 5 Fluid Filled System .....	6-22
Purging the Hydraulic System .....	6-24