

[Click here to get the complete manual](#)

PARTS MANUAL TL10 BU6Z003-0-0 S/N 201000002-UP

PARTS MANUAL

Contents

UNDERCARRIAGE

TRACK ROLLER A	1
TRACK ROLLER B	3
FRONT IDLER	5
TRACK ADJUSTER	7
TRAVEL DEVICE	9
CRAWLER BELT	11

MAIN FRAME & CONTROL LEVER

FRAME	13
ARM STOPPER	15
HOOK	17
OPERATION LEVER & STAND	19
PIPING; OPERATION LEVER	25
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 1	27
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 2	29

ENGINE & ELECTRICAL SYSTEM

ENGINE & ACCESSORIES (1/4) 1	33
ENGINE & ACCESSORIES (1/4) 2	37
ENGINE & ACCESSORIES (1/4) 3	41
ENGINE & ACCESSORIES (1/4) (with CCV heater) 1	45
ENGINE & ACCESSORIES (1/4) (with CCV heater) 2	47
ENGINE & ACCESSORIES (1/4) (with CCV heater) 3	51
ENGINE & ACCESSORIES (2/4)	55
ENGINE & ACCESSORIES (3/4)	57
ENGINE & ACCESSORIES (4/4)	59
DRAIN PLUG	61
CONTROL BOX; R.H.	63
CONTROL BOX; R.H. (with CCV heater)	67
CONTROL BOX; L.H.	71
CONTROL BOX; L.H. (hydraulic quick hitch type)	73
ENGINE CONTROL	75
FOOT ACCELERATOR	77
ELECTRICAL (1/2) (201000002-201001716) 1	79
ELECTRICAL (1/2) (201000002-201001716) 2	83
ELECTRICAL (1/2) (201000002-201001716) 3	87
ELECTRICAL (1/2) (201000002-201001716) 4	91
ELECTRICAL (1/2) (201000002-201001716) 5	93
ELECTRICAL (1/2) (201001717-) 1	95
ELECTRICAL (1/2) (201001717-) 2	99
ELECTRICAL (1/2) (201001717-) 3	101
ELECTRICAL (2/2) (201000002-201001716)	103
ELECTRICAL (2/2) (201001717-)	105
ELECTRICAL (CAB)	107
ELECTRICAL (CANOPY)	109
BATTERY	111
REAR LAMP	113
MAINTENANCE LIGHT SOCKET	115
WINDOW WASHER	117
RADIO	119

HYDRAULIC PIPING & TANK

VALVE & ACCESSORIES (1/3)	121
VALVE & ACCESSORIES (1/3) (high flow) 1	125
VALVE & ACCESSORIES (1/3) (high flow) 2	129
VALVE & ACCESSORIES (2/3)	133
VALVE & ACCESSORIES (3/3)	135

PIPING 1	137
PIPING 2	141
PIPING (high flow) 1	145
PIPING (high flow) 2	149
RIDE CONTROL	153
PUMP DRIVE	155
GEAR PUMP DRIVE (HIGH FLOW)	159
HYDRAULIC TANK	161
FUEL TANK & FUEL PIPING (1/2) 1	165
FUEL TANK & FUEL PIPING (1/2) 2	167
FUEL TANK & FUEL PIPING (2/2)	171

COVER & CAB

COVER (1/3)	173
COVER (2/3) (rear door)	177
COVER (3/3) (engine hood)	179
FLOOR FRAME	181
SEAT (1/2)	185
SEAT (2/2)	187
SEAT (1/2) (with air suspension)	189
SEAT BELT (THREE POINT SEAT BELT)	191
SEAT SWITCH	193
SAFETY BAR	195
CANOPY MOUNT	197
CANOPY 1	201
CANOPY 2	205
CANOPY 3	207
CAB MOUNT	209
CAB (1/2) 1	213
CAB (1/2) 2	215
CAB (1/2) 3	219
CAB (1/2) 4	223
CAB (1/2) 5	225
CAB (2/2) (front door)	227
CAB FRONT DOOR POLYCARBONATE TYPE (2/2) (2/2)	229
CAB KIT (1/2) 1	231
CAB KIT (1/2) 2	233
CAB KIT (1/2) 3	235
CAB KIT (1/2) 4	237
CAB KIT (2/2) (front door)	239
DOOR KIT (1/2) POLYCARBONATE TYPE	241
DOOR KIT (2/2) POLYCARBONATE TYPE	243
REAR MIRROR	245
AIR CONDITIONER (1/5) (compressor)	247
AIR CONDITIONER (2/5) (condenser)	251
AIR CONDITIONER (3/5) (air conditioner unit)	255
AIR CONDITIONER (4/5)	257
AIR CONDITIONER (5/5)	259

ATTACHMENT

ARM	261
QUICK HITCH	265
QUICK HITCH (hydraulic type) 1	267
QUICK HITCH (hydraulic type) 2	271
QUICK HITCH (hydraulic type, with 3/4 coupler) 1	273
QUICK HITCH (hydraulic type, with 3/4 coupler) 2	277
PIPING; ARM 1	279
PIPING; ARM 2	283
PIPING; ARM (with coupler) 1	287
PIPING; ARM (with coupler) 2	289

PIPING; ARM (high flow) 1	293
PIPING; ARM (high flow) 2	297
PIPING; ARM (high flow, with 3/4 coupler) 1	299
PIPING; ARM (high flow, with 3/4 coupler) 2	303
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 1	307
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 2	311
2ND AUXILIARY LINE	315
2ND AUXILIARY LINE (except for main aux. type)	317

DECAL & TOOL

DECAL (canopy) 1	319
DECAL (canopy) 2	325
DECAL (canopy) 3	331
DECAL (cab) 1	337
DECAL (cab) 2	343
DECAL (cab) 3	349
DECAL (high flow)	355
TOOL & ACCESSORIES	357
PAINTED COLOR	359

HYDRAULIC DEVICE

SERVICE TOOL	361
CONTROL VALVE	363
CONTROL VALVE (HIGH FLOW)	367
BLOCK ASSY NO. 1	369
BLOCK ASSY NO. 2	371
BLOCK ASSY NO. 3	373
RH PILOT VALVE	375
LH PILOT VALVE	377
HANDLE (WITH SLIDE SWITCH)	379
HANDLE (WITH 5 SWITCH)	381
SUB VALVE	383
SOLENOID VALVE; 1 BLOCK (201000002-201001488)	385
SOLENOID VALVE; 1 BLOCK (201001489-)	387
SOLENOID VALVE; 1 BLOCK	389
SOLENOID VALVE; 1 BLOCK	391
ELECTRICAL PROPORTION VALVE	393
SELECTOR VALVE (ISO-H PATTERN)	395
SHUTTLE VALVE (ISO-H PATTERN)	397
LIFT ARM CYLINDER	399
BUCKET CYLINDER	401
QUICK HITCH CYLINDER	403
TRAVEL MOTOR (1/3) (reduction sec.)	405
TRAVEL MOTOR (2/3) (motor sec.)	407
TRAVEL MOTOR (3/3) (valve sec.)	409
HYDRAULIC PUMP (1/5)	413
HYDRAULIC PUMP (2/5)	415
HYDRAULIC PUMP (3/5)	419
HYDRAULIC PUMP (4/5)	421
HYDRAULIC PUMP (5/5)	427
GEAR PUMP (2 blocks)	429
GEAR PUMP (high flow)	431

ENGINE V3800-CR-TE4B-TLTU1 (HIGH FLOW) EBC

CRANK CASE (HIGH FLOW)

CRANK CASE (HIGH FLOW)	433
------------------------	-----

OIL PAN

OIL PAN	435
---------	-----

DIPSTICK AND GUIDE	
DIPSTICK AND GUIDE	437
CYLINDER HEAD	
CYLINDER HEAD	439
INLET VALVE AND EXHAUST VALVE	
INLET VALVE AND EXHAUST VALVE	441
ROCKER ARM SHAFT	
ROCKER ARM SHAFT	443
HEAD COVER	
HEAD COVER	445
GEAR CASE	
GEAR CASE	447
PISTON AND CRANKSHAFT	
PISTON AND CRANKSHAFT	449
CAMSHAFT AND IDLE GEAR SHAFT	
CAMSHAFT AND IDLE GEAR SHAFT	451
BEARING CASE COVER	
BEARING CASE COVER	453
FLYWHEEL	
FLYWHEEL	455
SUPPLY PUMP	
SUPPLY PUMP	457
FUEL FILTER	
FUEL FILTER	459
FUEL FILTER	
FUEL FILTER	461
FUEL PIPE	
FUEL PIPE	463
SEPERATOR	
SEPERATOR	465
INJECTION PIPE	
INJECTION PIPE	467
COMMON RAIL	
COMMON RAIL	469
ALTERNATOR AND PULLEY	
ALTERNATOR AND PULLEY	471
ALTERNATOR (COMPONENT PARTS)	
ALTERNATOR (COMPONENT PARTS)	473
STARTER	
STARTER	475