
TB138FR Book No. BG5Z000 S/N 13810003-Index

TB138FR

Book No. BG5Z000 Serial No.13810003-

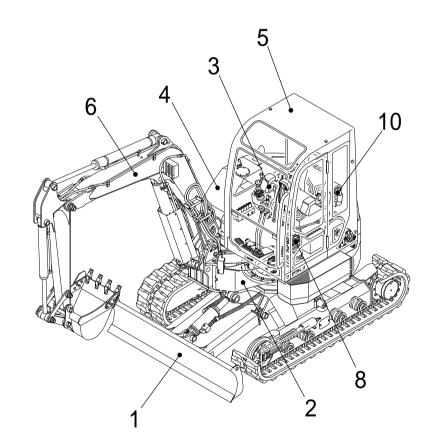

								NDEX	
ltem	Part number	Description	Q'ty	Chan.	Serial	No.	Serv.	Remarks	
1		UNDERCARRIAGE	-						
2		TURNTABLE & CONTROL LEVER							
3		ENGINE & ELECTRICAL SYSTEM							
4		HYDRAULIC PIPNG & TANK							
5		COVER & CAB							
6		HOE ATTACHMENT							
7		DECAL & TOOL							
8		HYDRAULIC DEVICE							
10		ENGINE							
		2006.11.28							

NAME	Page	
LOWER FRAME	1-1	
CRAWLER BELT	1-1	
CRAWLER BELT (with rubber pads)	1-2	
CARRIER ROLLER	1-3	
TRACK ROLLER		
FRONT IDLER	1-5	
-	1-6	
	1-7	
	1-8	
	1-9	
SWIVEL JOINT & ACCESSORIES	1-10	
	1-11	
PIPING; LOWER	1-12	
	2-1	
	2-2	
BOOM OFFSET (1/2)	2-3	
BOOM OFFSET (2/2)	2-4	
OFFSET SWITCH	2-5	
TRAVEL LEVER	2-6	
DOZER BLADE LEVER	2-7	
OPERATION LEVER & STAND	2-8	
PIPING; OPERATION LEVER (1/2)	2-9	
PIPING; OPERATION LEVER (2/2)	2-10	
PIPING; OPERATION LEVER (1/2) (ISO-JCB pattern)	2-11	
PIPING; OPERATION LEVER (2/2) (ISO-JCB pattern)	2-12	
ENGINE & ACCESSORIES (1/3)	3-1	
ENGINE & ACCESSORIES (2/3)	3-2	
ENGINE & ACCESSORIES (3/3)	3-3	
AIR CLEANER (for double element)	3-4	
DRAIN PLUG	3-5	
CONTROL BOX	3-6	
ENGINE CONTROL	3-7	
DECEL UNIT	3-8	
ELECTRICAL (1/2)	3-9	
ELECTRICAL (2/2)	3-10	
TRAVEL ALARM	3-11	
BATTERY	3-12	
RADIO	3-13	
WINDOW WASHER	3-14	
CANOPY LIGHT	3-15	
VALVE & ACCESSORIES (1/2)	4-1	
VALVE & ACCESSORIES (1/2) (1st aux. proportional cont.)		
VALVE & ACCESSORIES (2/2)		
PIPING; UPPER (1/3)		
PIPING; UPPER (2/3)	<u>4-4</u> 4-5	
PIPING; UPPER (3/3) (with 2nd aux. lines)	4-6	
PIPING; UPPER (1/3) (1st aux. proportional cont.)	4-0	
PIPING; UPPER (2/3) (1st aux. proportional cont.)	4-7	
r in the order of the transmission of transmiss	4-0	