


[Click here to get the complete manual](#)

[CLICK HERE FOR
TABLE OF
CONTENTS](#)

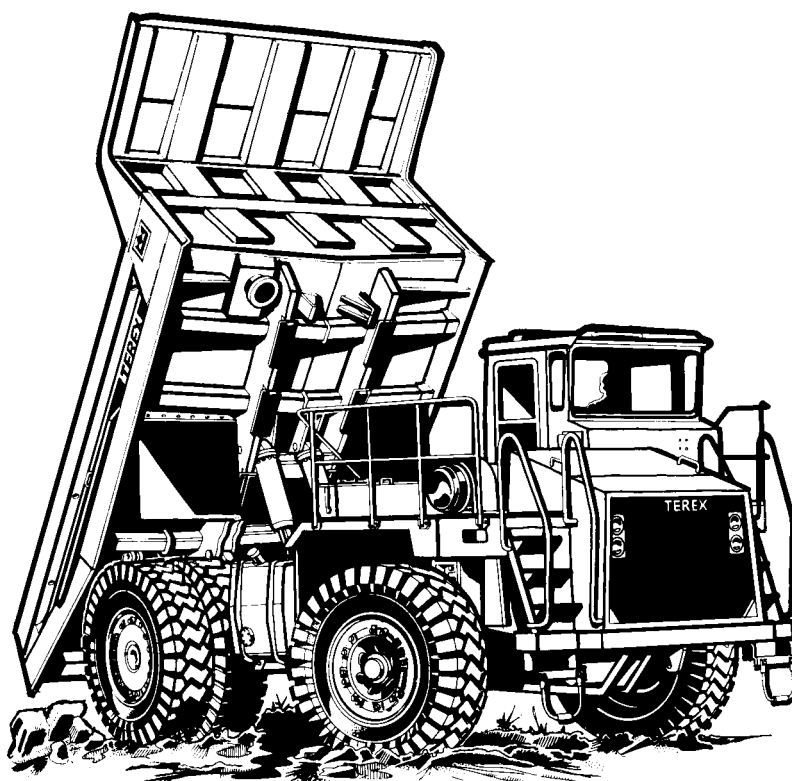

TR35 Off-Highway Truck Maintenance Manual



[CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX](#)

TECHNICAL PUBLICATIONS DEPARTMENT
TEREX EQUIPMENT LIMITED,
MOTHERWELL, SCOTLAND, ML1 5RY
REF. NO. SM788

TABLE OF CONTENTS

Section No.	Description	SM No.
000 0000	GENERAL INFORMATION TR35 Off-Highway Truck	1829
100 0010	CHASSIS Chassis, Hood and Fenders	1830
110 0030 0050 0130 0180	ENGINE Engine and Mounting Air Cleaner Power Takeoff Air Compressor Governor (Type D-2)	1831 1832 1867 1868
120 0010 0100	TRANSMISSION Transmission and Mounting Transmission Oil Filter	1876 1866
130 0010 0020	DRIVELINE Front Driveline Rear Driveline	1180 1324 Rev 1
140 0020 0040	FRONT AXLE Front Axle Assembly Wheel, Rim and Tyre	1869 1332 Rev 1
160 0020 0030 0050	REAR AXLE Differential Axle Group Wheel, Rim and Tyre	1325 Rev 1 1326 1327 Rev 1
165 0020 0030 0072	BRAKE PARTS Brake Parts - Front Brake Parts - Rear Slack Adjuster	1333 Rev 1 1878 1329
180 0030 0050	SUSPENSION SYSTEM Ride Cylinder - Front Ride Cylinder - Rear	1842 1843
190 0000 0270	ELECTRICAL SYSTEM Circuit Diagrams Switches and Sensors	1840 1844
200 0010	FUEL SYSTEM Fuel Tank and Mounting	1841
210 0000 0040 0060	COOLING SYSTEM Cooling System Radiator, Header Tank and Mounting Transmission Oil Cooler	1872 1870 1871