


[Click here to get the complete manual](#)

[CLICK HERE FOR
TABLE OF
CONTENTS](#)

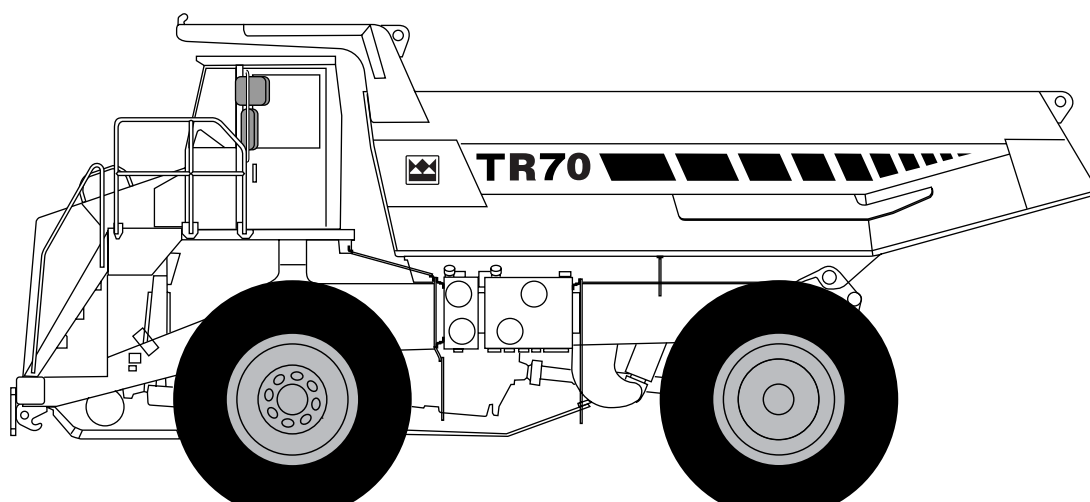

TR70 Off-Highway Truck Maintenance Manual



[CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX](#)

TECHNICAL PUBLICATIONS DEPARTMENT
TEREX EQUIPMENT LIMITED,
MOTHERWELL, SCOTLAND, ML1 5RY
REF. NO. SM789

TABLE OF CONTENTS

Section No.	Description	SM No.
000 0000	GENERAL INFORMATION TR70 Off-Highway Truck	1911
100 0010	CHASSIS Chassis, Hood and Fenders	1918
110 0030 0050 0130	ENGINE Engine and Mounting Air Cleaner Power Takeoff	1923 1925 1914
120 0010 0070 0070 0090 0100	TRANSMISSION Transmission and Mounting Commercial Electronic Control (CEC) Shift System Commercial Electronic Control 2 (CEC2) Power Takeoff Transmission Oil Filter	1932 1575 Rev 2 2128 1915 1931
130 0010 0020	DRIVELINE Front Driveline Rear Driveline	1577 1578
140 0040	FRONT AXLE Wheel, Rim and Tyre	2042
160 0020 0030 0050	REAR AXLE Differential Axle Group Wheel, Rim and Tyre	2045 1184 2044
165 0020 0030	BRAKE PARTS Brake Parts - Front Axle Brake Parts - Rear Axle	1916 2038
180 0030 0050	SUSPENSION SYSTEM Ride Cylinder - Front Ride Cylinder - Rear	1912 2033
190 0000 0270	CIRCUIT DIAGRAMS Circuit Diagrams Switches and Sensors	1924 2032 Rev 1
200 0010 0051	FUEL SYSTEM Fuel Tank, Lines and Mounting Electronic Foot Pedal	1927 2031
210 0040 0050 0060	COOLING SYSTEM Radiator, Header Tank and Mounting Disc Brake Oil Cooler Transmission Oil Cooler	2034 2035 2036