


[Click here to get the complete manual](#)

[CLICK HERE FOR
TABLE OF
CONTENTS](#)

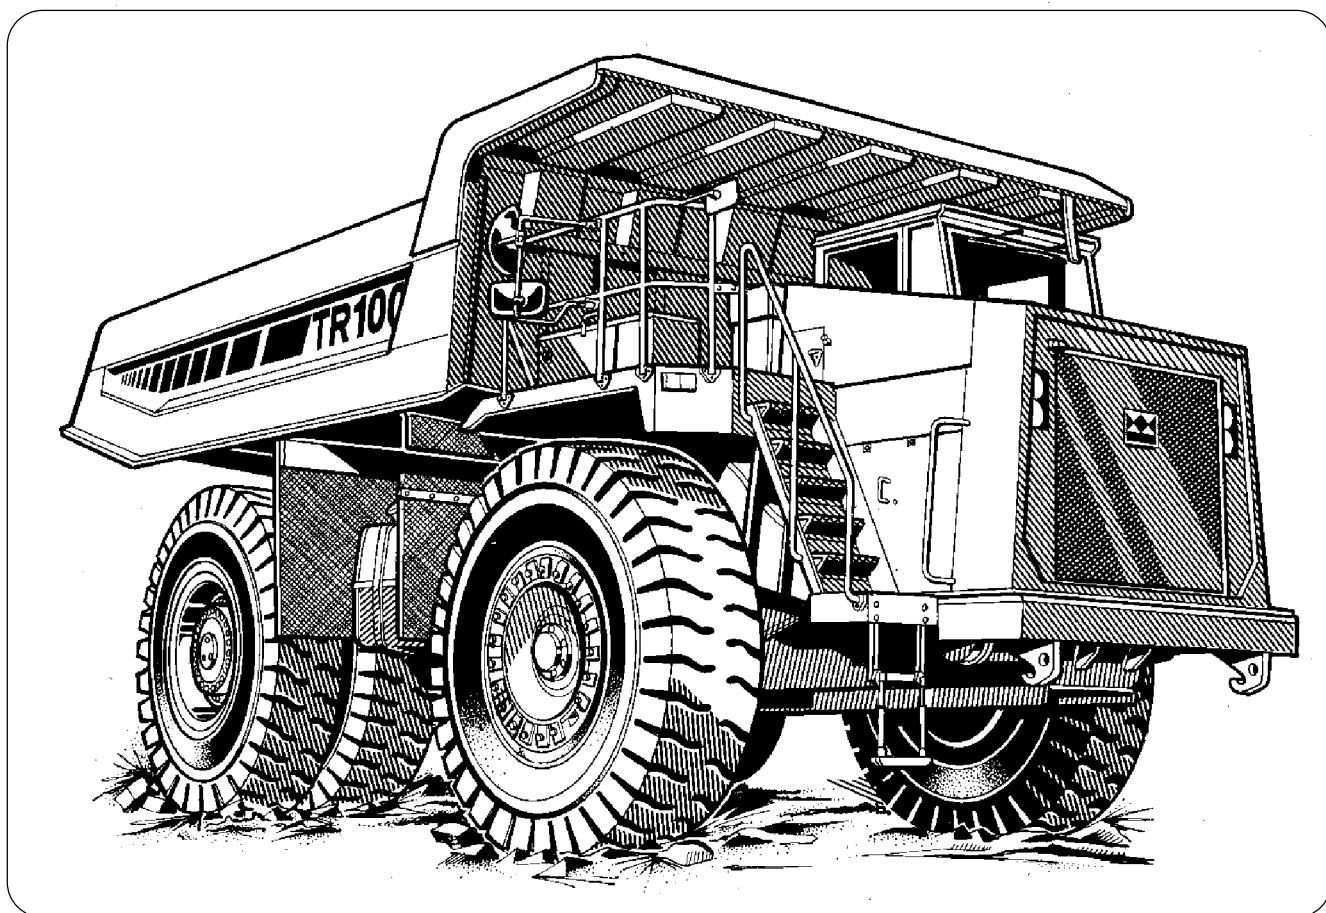

TR100 Mining Truck Maintenance Manual



[CLICK HERE TO RETURN TO
MAIN LIBRARY INDEX](#)

TECHNICAL PUBLICATIONS DEPARTMENT
TEREX EQUIPMENT LIMITED,
MOTHERWELL, SCOTLAND, ML1 5RY
REF. NO. SM755/783

TABLE OF CONTENTS

Section No.	Description	SM No.
000 0000	GENERAL INFORMATION TR100 Off-Highway Truck	1618 Rev 1
100 0010 0010	CHASSIS Chassis, Hood and Fenders - Pre January 2000 Production Chassis, Hood and Fenders - From January 2000 Production	1622 1898
110 0030 0050 0130	ENGINE Engine and Mounting Air Cleaner Power Takeoff	1655 Rev 1 1246 1656
120 0010 0010 0070 0090 0100	TRANSMISSION Transmission and Mounting - Pre March 1999 Production Transmission and Mounting - From March 1999 Production Commercial Electronic Control (CEC) Shift System Power Takeoff Transmission Oil Filter	1623 1899 1619 Rev 1 1178 1624
130 0010 0020	DRIVELINE Front Driveline Rear Driveline	1657 1658
140 0040	FRONT AXLE Wheel, Rim and Tyre	1625 Rev 1
160 0020 0020 0030 0050	REAR AXLE Differential Differential (Optional) Axle Group Wheel, Rim and Tyre	1626 Rev 1 1907 1627 Rev 1 1628 Rev 1
165 0020 0030	BRAKE PARTS Brake Parts - Front Axle Brake Parts - Rear Axle	1629 1630
180 0030 0050	SUSPENSION SYSTEM Ride Cylinder - Front Ride Cylinder - Rear	1631 1632
190 0000 0270 0270	CIRCUIT DIAGRAMS Circuit Diagrams Switches and Sensors - Pre March 2000 Production Switches and Sensors - From March 2000 Production	1585 1633 Rev 1 2046
200 0010	FUEL SYSTEM Fuel Tank and Mounting	1634
210 0000 0040 0040 0050 0060	COOLING SYSTEM Cooling System Radiator, Header Tank and Mounting - Pre September 1999 Production Radiator, Header Tank and Mounting - From September 1999 Production Disc Brake Oil Cooler Transmission Oil Cooler	1263 1635 1900 1636 1637