


[Click here to get the complete manual](#)

[CLICK HERE FOR  
TABLE OF  
CONTENTS](#)



# TR100 Mining Truck Maintenance Manual

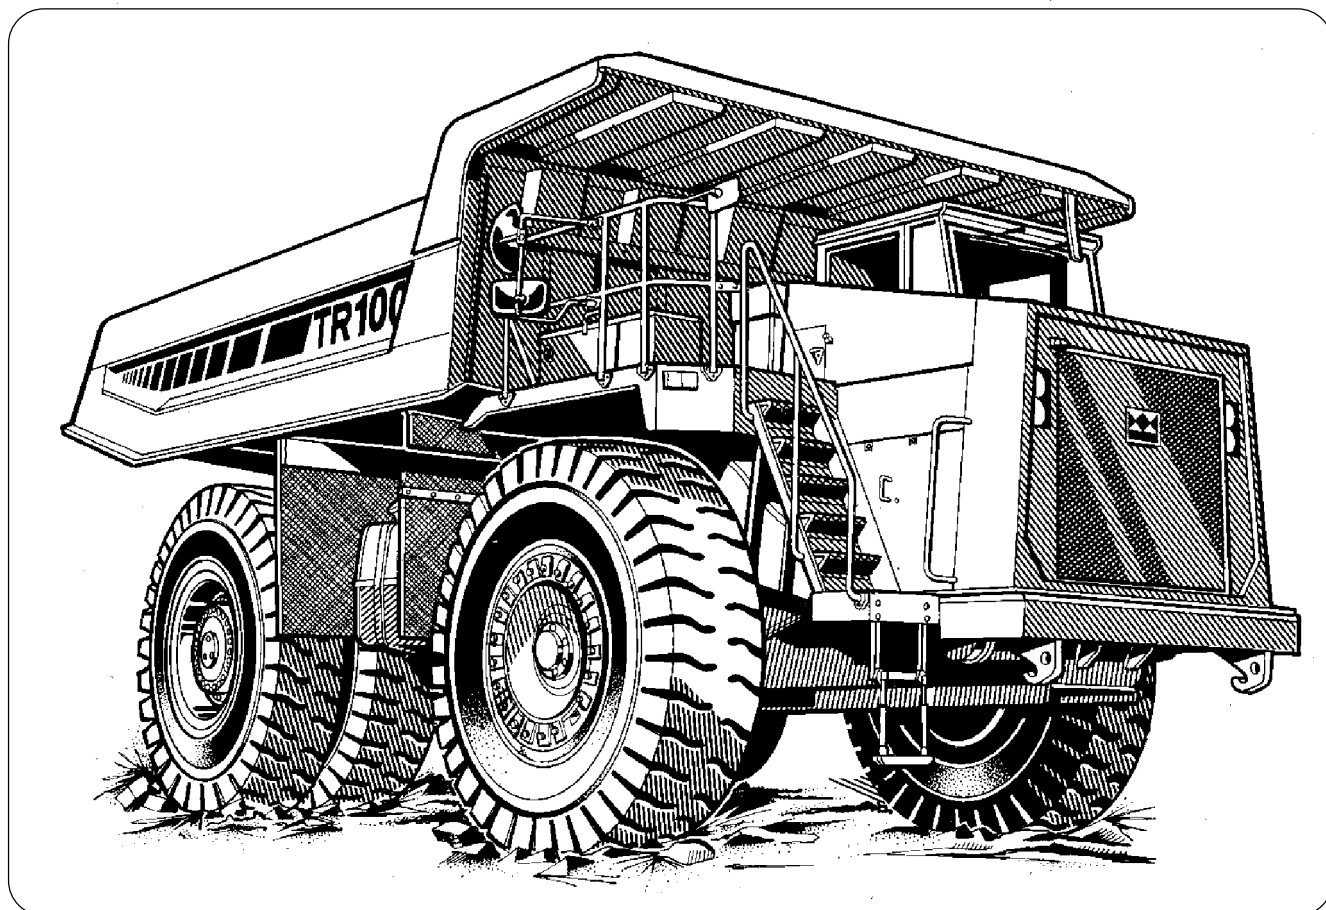

[CLICK HERE TO RETURN TO  
MAIN LIBRARY INDEX](#)

PRODUCT SUPPORT DEPARTMENT  
TEREX EQUIPMENT LIMITED,  
MOTHERWELL, SCOTLAND, ML1 5RY  
REF. NO. SM808

THIS PAGE IS INTENTIONALLY LEFT BLANK

## TABLE OF CONTENTS

Section No.	Description	SM No.
<b>000</b> 0000	<b>GENERAL INFORMATION</b> TR100 Off-Highway Truck	2132
<b>100</b> 0010	<b>CHASSIS</b> Chassis, Hood and Fenders	1898
<b>110</b> 0030 0050 0130	<b>ENGINE</b> Engine and Mounting Air Cleaner Power Takeoff	2134 2135 1656 Rev 1
<b>120</b> 0010 0070 0090 0100	<b>TRANSMISSION</b> Transmission and Mounting Commercial Electronic Control (CEC) Shift System Power Takeoff Transmission Oil Filter	1899 2136 1178 1624
<b>130</b> 0010 0020	<b>DRIVELINE</b> Front Driveline Rear Driveline	1657 1658
<b>140</b> 0040	<b>FRONT AXLE</b> Wheel, Rim and Tyre	1625 Rev 1
<b>160</b> 0020 0020 0030 0050	<b>REAR AXLE</b> Differential Differential (Optional) Axle Group Wheel, Rim and Tyre	1626 Rev 1 1907 1627 Rev 1 1628 Rev 1
<b>165</b> 0020 0030	<b>BRAKE PARTS</b> Brake Parts - Front Axle Brake Parts - Rear Axle	1629 1630
<b>180</b> 0030 0050	<b>SUSPENSION SYSTEM</b> Ride Cylinder - Front Ride Cylinder - Rear	1631 Rev 1 1632 Rev 1
<b>190</b> 0000 0270	<b>CIRCUIT DIAGRAMS</b> Circuit Diagrams Switches and Sensors	2150 2137
<b>200</b> 0010 0051	<b>FUEL SYSTEM</b> Fuel Tank and Mounting Electronic Foot Pedal	2138 2031
<b>210</b> 0000 0040 0050 0060	<b>COOLING SYSTEM</b> Cooling System Radiator, Header Tank and Mounting Disc Brake Oil Cooler Transmission Oil Cooler	2140 2139 2141 2142