Click here to get the complete manual



SKID STEER LOADER COMPACT TRACK LOADER

L180 L185 L190 C185 C190

Mechanical and Pilot Control

(Cab Upgrade Machines)

REPAIR MANUAL

87630288 NA Replaces87578815 NA

Issued 12-2006 Revised 05-2007

NEW HOLLAND

Contents

INTRODUCTION DISTRIBUTION SYSTEMS PRIMARY HYDRAULIC POWER SYSTEM A.10.A SECONDARY HYDRAULIC POWER SYSTEM A 12 A HIGH-FLOW HYDRAULIC POWER SYSTEM A.16.A **ELECTRICAL POWER SYSTEM** A.30.A LIGHTING SYSTEM A.40.A POWER PRODUCTION В **ENGINE** B.10.A B 20 A **FUEL AND INJECTION SYSTEM** AIR INTAKE SYSTEM B.30.A **ENGINE COOLANT SYSTEM** B.50.A LUBRICATION SYSTEM B 60 A STARTING SYSTEM B.80.A POWER TRAIN C.10.B POWER COUPLING Fixed coupling C.20.F TRANSMISSION Hydrostatic TRAVELLING D FRONT AXLE D.10.A **REAR AXLE** D.12.A STEERING Steering clutch D.20.F PARKING BRAKE Hydraulic D.32.C WHEELS AND TRACKS Tracks D.50.B WHEELS AND TRACKS Wheels D.50.C Final drive D.15.A **BODY AND STRUCTURE** F USER CONTROLS AND SEAT E.32.A E.34.A **USER PLATFORM ENVIRONMENT CONTROL Heating system** E.40.B

| ENVIRONMENT CONTROL Air-conditioning system | E.40.C |
|---------------------------------------------|--------|
| SAFETY SECURITY ACCESSORIES Safety | E.50.B |
| WORKING ARM | Н |
| SINGLE ARM Lift | H.40.B |
| SINGLE ARM TOOL ATTACHMENT Tilt | H.50.C |
| TOOLS AND COUPLERS | J |
| CARRYING Unarticulated tools | J.50.B |
| COUPLING Hydraulic coupling | J.80.C |
| COUPLING Mechanical coupling | J.80.B |