

[Click here to get the complete manual](#)



LS180.B
LS185.B
LS190.B

**Workshop
Manual**

**Workshop
Manual**

Print No. 604.13.552.01
English - Printed in Italy



LS180.B
LS185.B
LS190.B



REPAIR MANUAL



LS180.B
LS185.B
LS190.B

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
HIGH-FLOW HYDRAULIC POWER SYSTEM	A.16.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A

POWER PRODUCTION

B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

POWER TRAIN

C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

TRAVELLING

D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
STEERING Steering clutch	D.20.F
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Wheels	D.50.C
Final drive	D.15.A

BODY AND STRUCTURE

E

USER CONTROLS AND SEAT	E.32.A
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B

ENVIRONMENT CONTROL Air-conditioning system E.40.C

SAFETY SECURITY ACCESSORIES Safety E.50.B

WORKING ARM H

BOOM Lift H.20.B

SINGLE ARM Lift H.40.B

SINGLE ARM TOOL ATTACHMENT Tilt H.50.C

TOOLS AND COUPLERS J

CARRYING Unarticulated tools J.50.B

COUPLING Hydraulic coupling J.80.C

COUPLING Mechanical coupling J.80.B