

[Click here to get the complete manual](#)



NEW HOLLAND

LM1133

Workshop
Manual

Workshop Manual

Print No. 87474458A
English - Printed in Italy

LM1133



LM1133

TELEHANDLERS

Repair Manual

Document N°. 87474458A (I - 2008)



THIS WARNING SYMBOL ACCOMPANIES IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read the safety instructions carefully, and follow the precautions recommended in order to avoid potential risks and safeguard your health and your safety.

You will find this symbol in the text of this Manual with the following key words:

WARNING - Cautions intended to avoid unsuitable repair operations with potential consequences for the safety of the person performing the repair.

DANGER - Warnings specifically indicating potential dangers for the safety of the operator or of other persons directly or indirectly involved.

IMPORTANT WARNINGS

All maintenance and repair operations listed in this Manual must be performed exclusively by the Service Network of the Manufacturer, complying strictly with the indications herein and using the prescribed special tools where indicated.

Any person performing service operations described in the manual and failing to abide strictly by the instructions becomes solely responsible for any consequential damage that could occur.

The Manufacturer and all organizations in the distribution chain associated with the Manufacturer, including national, regional and local dealers though not excluding others, decline all liability for damages attributable to abnormalities in the operation or response of parts and/or components not approved by the Manufacturer, used in the servicing and/or repair of a product built or marketed by the Manufacturer.

In any event, no warranty of any description is offered on or applicable to the product built or marketed by the Manufacturer, in respect of damages resulting from abnormal operation or response of parts and/or components not approved by the Manufacturer.

AVOID ACCIDENTS

Most accidents and injuries that occur in and around factories, on farms, in the home or on the roads, are caused by failure to follow some simple and fundamental rule regarding precautionary procedures and safety. Accordingly, IN THE MAJORITY OF CASES, ACCIDENTS CAN BE AVOIDED: it is sufficient simply to foresee the possible causes, and exercise the necessary caution and prudence.

Whatever the type of equipment, and however well designed and built, it is not possible to eliminate the risk of accident completely without adversely affecting certain essential features instrumental in providing reasonable levels of accessibility and ensuring smooth operation.

A careful and prudent operator is the best insurance against any accident.

The observance of just one elementary safety rule will of itself be sufficient in avoiding many serious accidents.

This rule is: never attempt any cleaning, lubrication or maintenance operation with the machine in motion.



CAUTION

Before commencing any kind of maintenance, adjustment or repair work on machines equipped with attachments operated hydraulically, mechanically or by wire ropes (such as front loaders, dozers, scrapers, etc.) make certain the attachment is lowered and resting on the ground.

If the attachment needs to be in the raised position in order to gain access to one part of the machine or another, it must be supported in the raised position by separate equipment, and not held with the machine controls.

MODEL DESIGNATIONS

The models making up the range of telescopic handlers (Telehandlers) described in this manual are identified in the text by reference to the maximum reach of the boom.

The vehicles listed below may not be available in all countries or on all markets. For up to date information on all machines, consult your authorized dealer.

Model	LM1133
	with Stab.
Engine	Turbocharged 74 kW
Maximum lifting height (m)	10.5
Maximum capacity (kg) at 500 mm from fork rail	3300
Capacity at maximum height (kg)	3300
Reach at maximum height (m)	2.5
Maximum longitudinal reach (m)	7.7
Capacity at maximum reach (kg)	800
Weight (kg)	8500
Length (m)	6576

Workshop manual

LM1133

TELESCOPIC HANDLER

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	10
Maintenance techniques	11

SECTION 10 – ENGINE

Description	Page
Main engine specifications	3
General engine specifications	4
General engine F4GE9484F*J600	6
Removal and installation of engine and radiator	11
Troubleshooting	23
Tightening torques	36
Special tools	37

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Transmission assembly	5
Drop box assembly	7
Operation of gearbox	8
Diagrams: operation of transmission and circulation of hydraulic oil	15
Operation of modulating valve	31
Torque converter hydraulic circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure tests on clutch and high pressure circuit	38
Pressure tests on torque converter and cooler circuit	39
Test points	40
Assembly instructions	42
Transmission overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Technical data	1
Description	2
Operation	4
Troubleshooting	6
Wheel toe-in check	7
Component overhaul	7
Front axle removal procedure	8
Front axle overhaul	9
Axle drive pinion bearing adjustment	54
How to install and adjust the axle drive pinion	56
Front drive shaft	59

SECTION 27 - REAR AXLE

Description	Page
Technical data	1
Description	2
Functional diagram	5
Component overhaul	7
Rear axle removal procedure	7
Overhaul	8
Special tools	9

SECTION 33 - BRAKING SYSTEM

Description	Page
Service brakes	2
Parking brake	4
Brake disc adjustment	7
Troubleshooting	8
Brakes disassembly	9

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Steering system hydraulic circuit, description and operation	3
Introduction	3
Steering valve	3
Telescopic boom hydraulic circuit	4
Component operation	7
Hydraulic pump	7

Front loader controls/operation	10
Balancing valves	12
Power steering (OSPQ)	14
Telescopic boom distributor	15
Stabiliser and chassis levelling control distributor	25
Boom cylinders LM1133	26
Chains	36
Boom	38

SECTION 55 – ELECTRICAL SYSTEM

Description	Page
Chapter 1 – Electrical system - general	
Electrical equipment specifications	1
Electrical system and fuses	2
Controls and instruments	6
Procedure for calibrating the tip-over prevention system	17
Bulb replacement	23
Protecting the electrical systems during charging or welding	26
Starting the machine using jump leads	27
Temporary wiring repairs	28
Electrical system – general fault finding	30
Chapter 2 – Circuit diagrams	
List of connectors	32
List of components	34
How to use the circuit diagrams	35
Diagram 1: Starting / recharge / warning lights / indicators	39
Diagram 2: Transmission	41
Diagram 3: Wheel alignment / solenoid valves / brake system	45
Diagram 4: Boom control	47
Diagram 5: Stabiliser	49
Diagram 6: Lights / windscreen wiper	53
Diagram 7: Work lights / beacon	55
Diagram 8: Tip-over prevention system / roof wiper	57
Diagram 9: Heater / radio / trailer socket / interior light	59
Diagram 10: Air-conditioning system	61
Chapter 3 – Wiring list	
Console wiring	in back pocket
Cab wiring	in back pocket
Front end wiring	in back pocket
Rear end wiring	in back pocket
Engine wiring	in back pocket

SECTION 60 - AIR CONDITIONING SYSTEM

Description	Page
Air conditioning system	2
Operation	2
Cab heating-ventilation controls	3
Precautions for use	5
Connections for servicing tools	8
Draining the refrigerant	9
Recharging with refrigerant	9
Leak test	10
Special tools	12
Fault finding	13