

[Click here to get the complete manual](#)

 **NEW HOLLAND**

LM 1330
LM 1333

Workshop Manual

Workshop Manual

Stampato N° 87755818
Italiano - Printed in Italy

LM1330
LM1333

LM1330

LM1333

TELEHANDLERS

Workshop Manual

Print N. 87755818 (I - 2008)



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

WARNING - Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.

DANGER - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organization of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, MOST ACCIDENTS CAN BE PREVENTED by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



ATTENTION

On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

MODEL CODES

The complete range of telescopic handlers (Telehandler) described in this manual is identified in the text by reference to the maximum extension of the telescopic arm.

The vehicles listed below may not be available in all countries or markets, therefore for the latest information consult your authorised dealer.

Model	LM1330	
	LM1333	
	no stab.	Small stab.
Engine	74 kW Turbocharged with Aftercooler	
Max. lifting height (m)	12,750	13.060
Max. capacity (kg) a 500 mm from fork stop	3.300	3.300
Capacity at max. height (kg)	2.500	3.300
Extension at max. height (m)	1.800	1.800
Max. longitudinal extension (m)	8.750	
Capacity at max. extension (kg)	650	1.350
Weight (kg)	9.600	
Length (m)	5.950	

Workshop Manual

LM1330

LM1333

TELEHANDLERS

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	9
Maintenance techniques	10

SECTION 10 - ENGINE

Description	Page
Main engine specifications	3
General engine specifications	4
General information on F4GE9484F*J600 engine	6
Removal and installation of engine and radiator	11
Troubleshooting	23
Tightening torques	36
Special tools	37

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4	2
Driving with the powershift gearbox	2
Gearbox assembly	5
Idler gear case assembly	7
Gearbox operation	8
Transmission and Hydraulic oil circuit diagrams	15
Modulation valve operation	31
Torque converter and heat exchanger hydraulic oil circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure testing clutch and high pressure circuit	38
Pressure testing torque converter and cooler circuit	39
Check points	40
Assembly instructions	42
Overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Specifications	1
Description	2
Operation	3
Troubleshooting	4
Wheel toe-in check	5
Component overhaul	5
Front axle removal procedure	6
Front axle overhaul	7
Axle drive pinion bearing adjustment	52
How to install and adjust the axle drive pinion	54
Front drive shaft	57

SECTION 27 - REAR AXLE

Description	Page
Specifications	1
Description	2
Operation diagram	3
Component overhaul	5
Rear axle removal procedure	5
Overhaul	6
Special tools	7

SECTION 33 - BRAKES

Description	Page
Power brakes	2
Brake pump	3
Parking brake	4
Brake disc adjustment	7
Troubleshooting	8
Brakes disassembly	9

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Description and operation	3
Introduction	3
Steering system hydraulic circuit	3
Steering valve	4
Telescopic boom hydraulic circuit	6

Component operation	11
Hydraulic pump	11
Delivery side divider valve	11
Pressure reduction valve	13
Front loader controls	15
Balancing valves	17
Power steering (OSPQ)	19
Telescopic boom distributor	20
Auxiliary control distributor	23
Cylinders	26
Boom	40

SECTION 55 - ELECTRICAL SYSTEM

Description	Page
Chapter 1 – Electrical system general	
Electrical equipment specifications	1
Electrical system and fuses	2
Controls and instruments	6
Procedure for the calibration of the load momentum system	17
Bulb replacement	22
Protecting the electrical systems during charging or welding	25
Starting the machine using jump leads	26
Temporary wiring repairs	27
Electrical system-general fault finding	29
Chapter 2 – Circuit diagrams	
List of connectors	32
List of components	33
How to use the circuit diagrams	34
Diagram 1: Starting/Recharge/Warning/Indicators lights	36
Diagram 2: Transmission	38
Diagram 3: Wheel alignment/Hydraulic solenoids/Brake system	40
Diagram 4: Boom control	42
Diagram 5: Stabiliser	44
Diagram 6: Lights/Front wiper	46
Diagram 7: Work lamps/Roof beacon light	48
Diagram 8: Load momentum device / Upper wiper	50
Diagram 9: Heating / Radio / Power socket / Ceiling light	52
Diagram 10: Conditioner	54

SECTION 60 - AIR CONDITIONING UNIT

Description	Page
AIR CONDITIONING UNIT	2
Operating instructions	2
Cab climate	4
Cab climate controls	4
Air conditioning system	5
Service precautions	6
Tool connections	9
Discharging	10
Refrigerant charging	10
Leak inspection	11
Special tools	14
Troubleshooting	15