

[Click here to get the complete manual](#)



NEW HOLLAND

 **NEW HOLLAND**

LM 1340 TURBO
LM 1343 TURBO
LM 1345 TURBO
LM 1443 TURBO
LM 1445 TURBO
LM 1743 TURBO

Workshop
Manual

Workshop Manual

Print No. 604.13.542.01
English - Printed in Italy

LM 1340 TURBO
LM 1343 TURBO
LM 1345 TURBO
LM 1443 TURBO
LM 1445 TURBO
LM 1743 TURBO

 **NEW HOLLAND**

PROVEN PERFORMANCE

LM1340 TURBO

LM1343 TURBO

LM1345 TURBO

LM1443 TURBO

LM1445 TURBO

LM1745 TURBO

TELEHANDLERS

Workshop Manual

Print N. 604.13.542.01 (III - 2006)



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

WARNING - Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.

DANGER - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organization of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



WARNING

On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

MODEL CODES

The complete range of telescopic handlers (Telehandler) described in this manual is identified in the text by reference to the maximum extension of the telescopic arm.

The vehicles listed below may not be available in all countries or markets, therefore for the latest information consult your authorised dealer.

Model	LM1340	LM1343	LM1345	LM1443	LM1445	LM1745
Stabilisers	no	small	large	small	large	large
Engine	88 kW (110 CV - 118 HP) Turbo Aftercooler					
Max. lifting height (m)	12.300	12.450	12.450	13.550	13.550	16.600
Max. capacity (kg) at 500 mm from fork stop	4000	4300	4500	4300	4500	4500
Capacity at max. height (kg)	2600	3600	4000	3000	3600	2500
Extension at max. height (m)	1.200	0.500	0.000	0.500	0.300	1.000
Max. longitudinal extension (m)	8.650			9.330		12.540
Capacity at max. extension (kg)	700	1700	1800	1400	1500	450
Weight (kg)	10480			10780		11760
Length (m)	5.850			6.070		6.135

Workshop Manual

LM1340 TURBO - LM1343 TURBO - LM1345 TURBO

LM1443 TURBO - LM1445 TURBO

LM1745 TURBO

TELESCOPIC HANDLERS

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	9
Maintenance techniques	10

SECTION 10 - ENGINE

Description	Page
Coding of engines of origin	3
Main specifications of engines	4
General engine specifications	5
Generalities	7
Description of main mechanical components of the engine	13
Lubrication	24
Cooling	29
Fuel and mechanical injection	31
Injection assembly	33
Removal of engine transmission group from the vehicle	43
Engine overhaul on bench	46
Replacing the injectors	98
Adjustment of valve clearance	100
Setting of timing	101
Timing of the injection pump	102
Electrical components	103
Troubleshooting	104
Tooling	108
Data - Mounting plays	112

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4	2
Driving with the powershift gearbox	2
Gearbox assembly	5
Idler gear case assembly	7
Gearbox operation	8
Transmission and Hydraulic oil circuit diagrams	15
Modulation valve operation	31
Torque converter and heat exchanger hydraulic oil circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Pressure testing clutch and high pressure circuit	38
Pressure testing torque converter and cooler circuit	39
Check points	40
Assembly instructions	42
Overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Specifications	1
Description	2
Operation	3
Troubleshooting	4
Wheel toe-in check	5
Component overhaul	5
Front axle removal procedure	6
Front axle overhaul	7
Axle drive pinion bearing adjustment	52
How to install and adjust the axle drive pinion	54
Front drive shaft	57

SECTION 27 - REAR AXLE

Description	Page
Specifications	1
Description	2
Operation diagram	3
Component overhaul	5
Rear axle removal procedure	5
Overhaul	6
Special tools	7

SECTION 33 - BRAKES

Description	Page
Specifications	1
Power brakes	2
Parking brake	3
Brake disc adjustment	6
Troubleshooting	7
Brakes disassembly	8

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Description and operation	3
Introduction	3
Steering system hydraulic circuit	3
Steering valve	4
Telescopic boom hydraulic circuit	6
Component operation	11
Hydraulic pump	11
Delivery side divider valve	11
Pressure reduction valve	13
Front loader controls	15
Power steering (OSPQ)	19
Telescopic boom distributor	21
Auxiliary control distributor	24
Cylinders	25
Arms	35
Working platform	61
Procedure for the calibration of the personnel carrier platform electronic controller	65
Special tools	71

SECTION 55 - ELECTRICAL SYSTEM

Description	Page
Chapter 1 – Electrical system general	
Electrical equipment specifications	1
Electrical system and fuses	2
Controls and instruments	6
Use of the tip-over prevention system	16
Bulb replacement	23
Protecting the electrical systems during charging or welding	26
Starting the machine using jump leads	27
Temporary wiring repairs	28
Electrical system-general fault finding	30
Working platform	31
Special tools	46
Chapter 2 – Circuit diagrams	
List of connectors	48
List of components	49
How to use the circuit diagrams	50
Diagram 1: Starter/Recharge/Warning/Indicators lights	53
Diagram 2: Transmission	55
Diagram 3: Wheel alignment/Hydraulic solenoids/Brake system	57
Diagram 4: Arm control	59
Diagram 5: Stabiliser	61
Diagram 6: Lights/Windscreen wiper	63
Diagram 7: Work lamps/Roof beacon light	65
Diagram 8: Tilting prevention system/Roof wiper	67
Diagram 9: Heating/Sound system/Electric socket/Interior lamp	69
Diagram 10: Air conditioner	71
Chapter 3 – Wiring list	
Instrument panel wiring	75
Cab wiring	79
Front wiring	80
Rear wiring	81
Engine wiring	82