

595SLE/595LSP LOADER BACKHOE SERVICE MANUAL

Table of contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL		
Standard torque specifications and loctite product chart	1001	7-79451GB
Fluids and lubricants	1002	7-22480GB
2 ENGINE		
Engine and radiator removal and installation	2000	7-21290GB
Specifications details	2401	7-26610GB
3 FUEL SYSTEM		
4 ELECTRICAL		
Electrical schematic	4001	7-26620GB
Battery	4003	7-21330GB
Starter motor	4004	7-21340GB
Removal and installation of electrical components	4005	7-21350GB
Alternator	4007	7-23790GB
Steering, loader and backhoe calibration	4008	7-26530GB
5 STEERING		
Removal and installation of steering components	5000	7-23810GB
Steering specifications, pressure checks and troubleshooting	5001	7-21900GB
Steering control valve	5002	7-21390GB
Steering cylinder	5003	7-21400GB
Front axle, four wheel drive machine/four wheel steer machine	5007	7-21890GB
6 POWER TRAIN		
Removal and installation of power train components	6000	7-22540GB
Transmission specifications, pressure checks and troubleshooting	6002	7-21430GB
Wheels and tyres	6003	7-22550GB
Gear box	6007	7-22560GB
Rear axle-four wheel steer	6008	7-21600GB
7 BRAKES		
Removal and installation of brake components	7000	7-23840GB
Disassembly and assembly of brake components	7003	7-23190GB
8 HYDRAULICS		
Removal and installation of hydraulic components	8001	7-23210GB
Hydraulic specifications, troubleshooting and pressure checks	8002	7-26630GB
Cleaning the hydraulic system	8003	7-21520GB
Hydraulic pump and unloader valve	8004	7-23250GB
Loader control valve	8005	7-23280GB
Cylinders	8006	7-26120GB
Backhoe control valve	8007	7-23290GB
Extending dipperstick control valve	8008	7-21560GB
Priority demand valve	8010	7-21570GB
9 MOUNTED/EQUIPMENT		
Pedals and levers	9001	7-23360GB
Loader	9006	7-26140GB
Cab and Rops	9007	7-26600GB
Backhoe	9008	7-26710GB
Seat and seat belt	9009	7-23830GB
Removal and installation of components	9011	7-23850GB

Section

1001

STANDARD TORQUE SPECIFICATIONS AND LOCTITE PRODUCT CHART