


[Click here to get the complete manual](#)

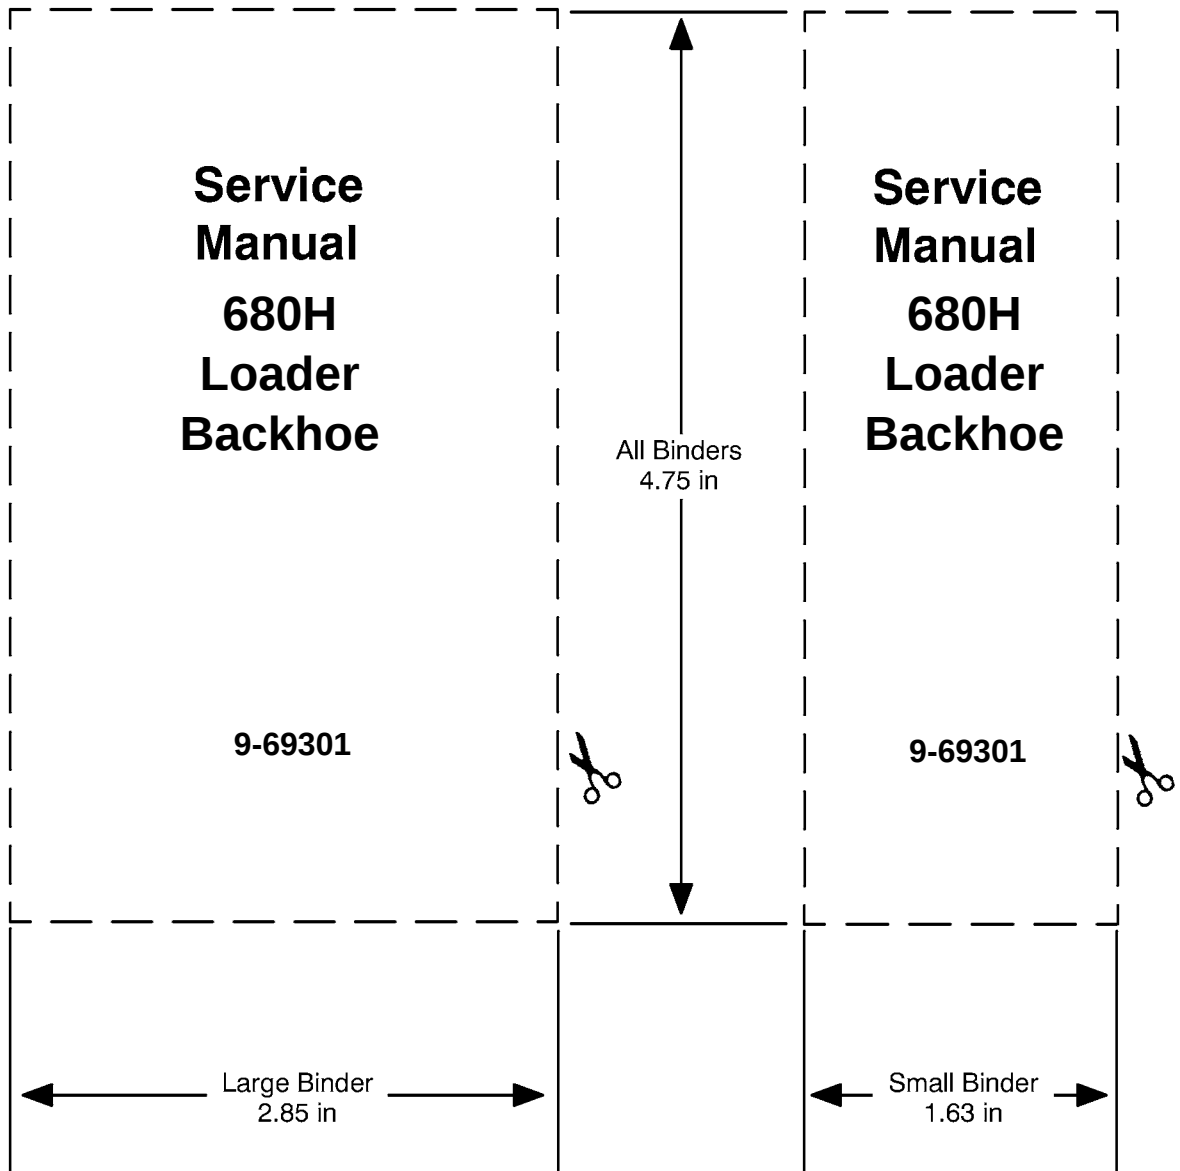

680H LOADER BACKHOE

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 - GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	9-69300
Maintenance and Lubrication	1002	9-69300
General Engine Specifications	1010	8-23130
Detailed Engine Specifications - 336BD Engines	1023	9-78647
2 - ENGINES		
Engine Diagnosis - See Section 2201		
Engine Tune-Up	2002	8-23140
Engine Stall Tests	2003	9-69300
Engine Removal and Installation	2004	9-69301
Engine Accessories (Air cleaner, muffler, exhaust pipe, radiator, cold start system)	2005	9-69300
Cylinder Head, Valve Train, and Camshaft	2015	8-23150
Cylinder Block, Sleeves, Pistons, and Rods	2025	8-23160
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	8-23170
Lubrication System with Two Gear Balancer and Oil Pump	2047	8-23180
Cooling System	2055	8-23190
Engine Diagnosis	2201	8-20110
Reconditioning Engine Cylinder Block	2290	8-21170
3 - FUEL SYSTEM		
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pumps	3012	9-74937
17 mm Fuel Injectors	3213	8-20240
Fuel Lines, Fuel Tank, and Engine Controls	3052	9-69300
Electric Fuel Pump	3053	9-69300
4 - ELECTRICAL		
Electrical System Troubleshooting	4002	9-69301
Wiring Diagrams	4003	9-69301
Batteries	4005	9-69301
Starter	4006	9-69300
Alternator	4007	9-69300
Instrument Cluster and Instrument Panel	4009	9-69300
5 - STEERING		
Steering System Troubleshooting	5002	9-69300
Steering Control Valve and Steering Column	5007	9-69300
Steering Cylinders	5010	9-69300
Relief Valve and Check Valve	5011	9-69300
Front Axle	5021	9-69300

DIVISION/SECTION

SECTION NO.

FORM NO.

6 - POWER TRAIN

General Transmission Information and Troubleshooting	6202	9-69301
Transmission	6210	9-69301
Transmission Controls	6211	9-69300
Drive Shaft	6222	9-69300
Differential and Planetaries	6226	9-69301
Wheels and Tires	6229	9-69300

7 - BRAKES

Troubleshooting and General Information for the Air System	7102	9-69300
Air Compressor and Governor	7103	9-69301
Air Reservoir and Relief Valve	7104	9-69300
Brake Valves (Treadles)	7105	9-69300
Brake Actuators	7107	9-69300
Alcohol Evaporator	7111	9-69300
Pressure Reducer Valve, Pressure Protection Valve, Double Check Valve, Control Valves for Clutch Cutout and Stoplamp Switch	7113	9-69300
Brakes and Brake Adjusters	7123	9-69300
Parking Brake Control Valve and Quick Release Valve	7126	9-69300

8 - HYDRAULICS

Hydraulic System Diagrams, Maintenance, Troubleshooting, and Pressure Checks	8002	9-69300
Cleaning the Hydraulic System	8003	9-69300
Hydraulic Pump	8005	9-69300
Flow Control Valve	8006	9-69300
Loader Control Valve	8007	9-69300
Loader and Backhoe Cylinders	8090	9-69300
Backhoe Relief Valve	8106	9-69301
Backhoe Control Valve	8107	9-69300
Stabilizer Control Valve	8109	9-69300
Boom Lock System	8121	9-69300

9 - MOUNTED EQUIPMENT

Air Conditioning Troubleshooting	9002	9-69300
Air Conditioning System	9003	9-69301
Loader	9010	9-69300
Cab and Canopy	9061	9-69300
Operators Seat and Seat Belts	9064	9-69300
Backhoe	9100	9-69301
Decals and Painting	9201	9-69300
Noise Control	9203	9-69300