

680L Loader Backhoe Service Manual

Table of Contents

Description	Section No.	Form No.
General	Tab 1	
Section Index - General		8-74751
Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-72841
Loctite Product Chart		8-98900
Engines	Tab 2	
Section Index - Engines		8-74761
Engine Removal and Installation	2001	8-74651
Engine Stall Tests	2002	8-74660
Detailed Engine Specifications	2401	8-26063
Cylinder Head and Valve Train	2415	8-26073
Cylinder Block	2425	8-26084
Lubrication System	2445	8-26093
Cooling System	2455	8-26103
Turbocharger	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
Fuel System	Tab 3	
Section Index - Fuel System		8-74771
Fuel System and Filters	3410	8-26131
Fuel Injection Pump - Cav	3411	8-97711
Fuel Injection Pump - Bosch	3412	8-26143
Fuel Injectors	3413	8-26152
Electrical System	Tab 4	
Section Index - Electrical		8-74781
Specifications, Schematics, Troubleshooting and Booster Batteries	4001	8-72892
Starter and Starter Solenoid	4002	8-72900
Batteries	4004	8-71701
Instrument Cluster	4005	8-72921
65 Ampere Alternator A187873	4007	8-15670
65 Ampere Alternator A186125	4019	8-12902
Steering	Tab 5	
Section Index - Steering		8-74791
Removal and Installation of Steering Components	5000	8-10370
Specifications, Troubleshooting and Pressure Checks	5001	8-72940
Steering Pump	5002	8-72950
Steering Control Valve	5003	8-72960
Steering Cylinder Repair	5004	8-72970
Flow Control Valve	5005	8-72980
Front Axle - Two Wheel Drive	5006	8-72990
Front Axle - Four Wheel Drive	5007	8-73001

Reprinted

680L Loader Backhoe Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train	Tab 6	
Section Index - Power Train		8-74801
Transmission Specification and Troubleshooting	6001	8-73020
Transmission Repair	6002	8-73031
Differential and Planetary Repair	6003	8-73041
Wheels and Tires	6004	8-74680
Clutch Cutout Valve	6005	8-73100
Brakes	Tab 7	
Section Index - Brakes		8-74811
Removal and Installation of Brake Components	7000	8-10380
Specifications and Troubleshooting	7001	8-73070
Brake Master Cylinder	7002	8-73080
Brake Valve	7003	8-73090
Brakes	7005	8-73111
Parking Brake and Actuator	7006	8-73120
Selector Valve	7007	8-74630
Hydraulics	Tab 8	
Section Index - Hydraulics		8-74821
Removal and Installation of Hydraulic Components	8000	8-10391
Specifications, Schematics, Troubleshooting and Pressure Checks	8001	8-74691
Cleaning the Hydraulic System	8002	8-73150
Pump Repair	8003	8-73160
Loader Control Valve Repair	8004	8-73170
Backhoe Relief Valve Repair	8005	8-73180
Backhoe Control Valve	8006	8-74701
Stabilizer Control Valve	8007	8-73200
Boom Lock	8008	8-73211
Cylinders	8009	8-74712
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		8-74831
Pedals and Levers	9000	8-74721
Air Conditioning Troubleshooting and Pressure Checks	9001	8-18910
Discharging and Charging the Air Conditioning System	9002	8-18920
Compressor and Clutch	9003	8-18930
Loader	9004	8-74731
ROPS Cab and ROPS Canopy	9005	8-73280
Standard Seat	9006	8-73290
Suspension Seat and Seat Belt	9007	8-73300
Backhoe	9008	8-74741

SECTION INDEX - GENERAL

Section Title	Section Number
Torque Specifications	1001
Fluids and Lubricants	1002