


[Click here to get the complete manual](#)

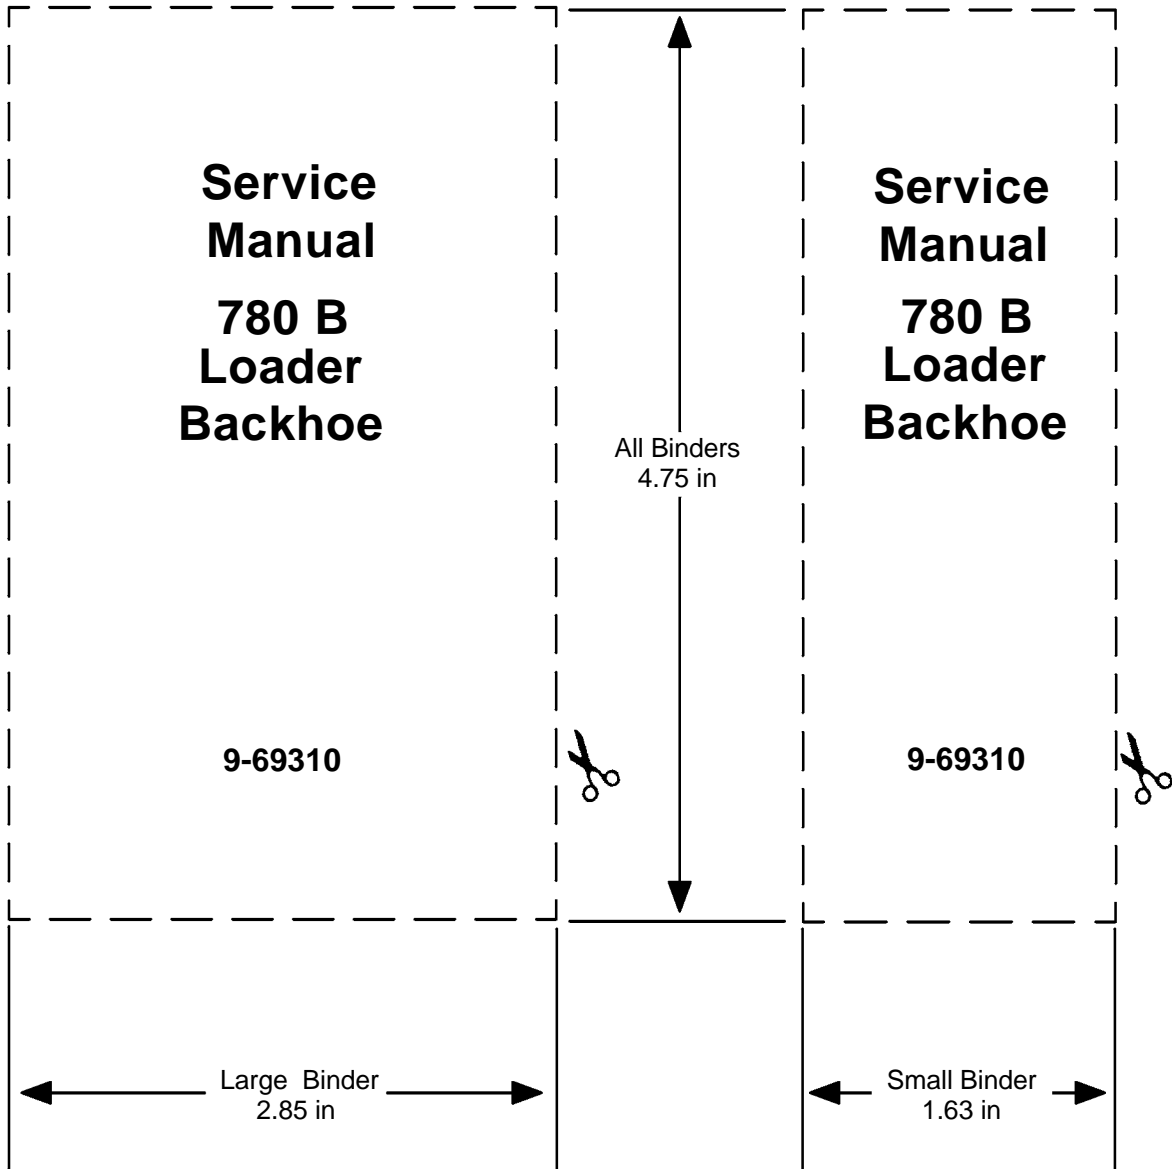

780B Loader Backhoe Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque		
Specifications	1001	9-69310
Maintenance and Lubrication	1002	9-69310
General Engine Specifications	1010	8-23230
Detailed Engine Specifications	1023	9-78647
2 ENGINES		
Engine Diagnosis - See Section 2201		
Engine Tune-Up	2002	8-23140
Engine Stall Tests	2003	9-69310
Engine Removal and Installation, Front Engine Support, and Hydraulic Pump Coupling	2004	9-69310
Engine Accessories (Air Cleaner, Radiator, and Cold Start System)	2005	9-69310
Cylinder Head, Valve Train, and Camshaft	2015	8-23250
Cylinder Block, Sleeves, Pistons, and Rods	2025	8-23160
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	8-23170
Lubrication System with Front Mounted Oil Pump	2046	8-23270
Lubrication System with Two Gear Balancer and Oil Pump	2047	8-23180
Cooling System	2055	8-23190
Turbocharger	2065	8-23260
Engine Diagnosis	2201	8-20110
Reconditioning Engine Cylinder Block	2290	8-21170
Turbocharger Failure Analysis	2565	8-78235
3 FUEL SYSTEM		
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pump	3012	9-74937
17 mm fuel Injectors	3213	8-20240
Fuel Lines, Fuel Tank, and Engine Controls	3052	9-69310
Electric Fuel Pump	3053	9-69300
4 ELECTRICAL		
Electrical System Troubleshooting	4002	9-69300
Wiring Diagrams	4003	9-69310
Battery	4005	9-69310
Starter	4006	9-69300
Alternator	4007	9-69300
Instrument Cluster and Instrument Panel	4009	9-69300
5 STEERING		
Steering System Troubleshooting	5002	9-69310
Steering Control Valve and Steering Column	5007	9-69310
Steering Cylinders	5010	9-69310
Relief Valve and Check Valve	5011	9-69310
Front Axle	5021	9-69310

DIVISION/SECTION	SECTION NO.	FORM NO.
6	POWER TRAIN	
	General Transmission Information and Troubleshooting	6202 9-69310
	Transmission and Torque Converter	6210 9-69310
	Transmission Controls	6211 9-69300
	Drive Shaft	6222 9-69300
	Differential and Planetaries	6226 9-69300
	Wheels and Tires	6229 9-69310
7	BRAKES	
	Troubleshooting and General Information for the Air System .	7102 9-69300
	Air Compressor and Governor	7103 9-69310
	Air Reservoir and Relief Valve	7104 9-69300
	Brake Valves (Treadles)	7105 9-69300
	Brake Actuators	7107 9-69310
	Alcohol Evaporator	7111 9-69300
	Pressure Reducer Valve, Pressure Protection Valve, Double Check Valve, and Clutch Cutout Valve	7113 9-69300
	Brakes and Brake Adjusters	7123 9-69300
	Parking Brake Control Valve and Quick Release Valve	7126 9-69300
8	HYDRAULICS	
	Hydraulic System Diagrams, Maintenance, Troubleshooting, and Pressure Checks	8002 9-69310
	Cleaning the Hydraulic System	8003 9-69300
	Hydraulic Pump	8005 9-69310
	Flow Control Valve	8006 9-69310
	Loader Control Valve	8007 9-69310
	Loader and Backhoe Cylinders	8090 9-69310
	Backhoe Relief Valve	8106 9-69310
	Backhoe Control Valve	8107 9-69310
	Stabilizer Control Valve	8109 9-69310
	Boom Lock	8121 9-69310
9	MOUNTED EQUIPMENT	
	Air Conditioning Troubleshooting	9002 9-69300
	Air Conditioning System	9003 9-69310
	Loader	9010 9-69310
	Cab and Canopy	9061 9-69310
	Operators Seat and Seat Belts	9064 9-69310
	Backhoe	9100 9-69310
	Decals and Painting	9201 9-69310
	Noise Control	9203 9-69300