

1838 Uni-Loader
Service Manual

Table of Contents

	Description	Section No.	Form No.
General		Tab 1	
	Loctite Product Chart		8-98900
	Torque Specifications	1001	8-71601
	Fluids and Lubricants	1002	7-60550
Engine		Tab 2	
	Removal and Installation and Radiator Removal and Installation	2001	7-61400
	Specification Details	2002	7-60560
	Special Service Tools	2003	7-61670
	Kubota Workshop Manual V2203-D1-B		97897-01082
Fuel System		Tab 3	
	Fuel System and Filters	3410	7-61640
	Injection Pump Timing	3412	7-61650
Electrical		Tab 4	
	Removal and Installation of Electrical Components	4001	7-61410
	Electrical Specifications, Troubleshooting and Schematics	4002	7-60570
	Battery	4003	8-11361
Power Train		Tab 6	
	Removal and Installation of Power Train Components	6001	7-61420
	Hydrostatic System Troubleshooting	6002	7-60580
	Piston Pumps	6004	7-61430
	Drive Motors	6005	7-61530
	Pump Drive Coupling	6006	7-61590
	Sprockets Chains and Axles	6007	7-61630
	Wheels and Tires	6008	8-11461
Hydraulics		Tab 8	
	Remove and Installation of Hydraulic Components	8001	7-61600
	Hydraulic Schematics, Specifications and Troubleshooting	8002	7-60591
	Cleaning the Hydraulic system and Hydrostatic System	8003	8-11521
	Gear Pump	8004	7-61490
	Loader Control Valve	8005	7-61500
	Auxiliary Control Valve	8006	7-61510
	Self-Leveling Control Valve	8007	7-61520
	Backhoe Control Valve - D100 Backhoe	8008	7-61610
	Cylinders	8009	7-61330
Mounted Equipment		Tab 9	
	Control Linkages, Pedals, Levers and Chains	9001	7-60600
	Loader	9002	7-61340
	ROPS Canopy, Seat, Seat Belts and Operators Compartment	9003	7-61350
	Backhoe - D100 Backhoe	9005	7-61680

Section 1001

STANDARD TORQUE SPECIFICATIONS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Rac 8-71601

© 1994 Case Corporation
Printed in U.S.A.
Issued November, 1991