

[Click here to get the complete manual](#)

SERVICE MANUAL

Loader / Backhoe

M
Series
2

6-74432

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Loader / Backhoe

M
Series
2

6-74432

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Loader / Backhoe

M
Series
2

6-74432

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Loader / Backhoe

M
Series
2

6-74432

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

M SERIES 2 LOADER/BACKHOE
Service Manual
Bur 6-74432
Table of Contents

Description	Section Number	Publication Form Number
General	Tab 1	
Section Index - General		6-74450
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	6-74461
Metric Conversion Chart	1003	7-52950
 Engine	 Tab 2	
Section Index - Engine		6-74470
Engine and Radiator Removal and Installation	2000	6-74481
Stall Test	2002	6-74492
In Vehicle Injector Pump Removal and Installation	2445	6-79380
Counter Balance Removal and Installation	2447	6-74700
Engine Service Manual		6-74500
 Fuel System	 Tab 3	
Section Index - Fuel System		6-74510
<i>NOTE: For Fuel System Repair See Engine Service Manual.</i>		
 Electrical	 Tab 4	
Section Index - Electrical		6-74520
Removal and Installation of Electrical Components	4000	6-74530
Electrical Specifications and Troubleshooting	4001	6-74541
Batteries	4003	6-74550
Starter and Starter Solenoid	4004	6-74560
Instrument Cluster	4005	6-74570

Reprinted

M SERIES 2 LOADER/BACKHOE

Service Manual

Bur 6-74432

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Steering	Tab 5	
Section Index - Steering		6-74590
Removal and Installation of Steering Components	5000	6-74600
Steering Specification, Pressure Checks and Troubleshooting	5001	6-74610
Steering Control Valve	5002	6-74621
Steering Cylinders	5003	6-74630
Front Axle - Two Wheel Drive	5005	6-74640
Front Axle - Four Wheel Drive 580M, 580SM, and 580SM+	5006	6-74650
Front Axle - Four Wheel Drive 590SM	5006	6-74670
Power Train	Tab 6	
Section Index - Power Train		6-74680
Removal and Installation of Power Train Components	6000	6-74690
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-74710
Power Shift Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-74720
Wheels and Tires	6003	6-74730
Rear Axle and Planetaries - 580M, 580SM, and 580SM+	6004	6-74751
Rear Axle and Planetaries - 590SM	6004	6-74770
Standard Transmission	6007	6-74782
Power Shift Transmission	6007	6-74790
Brakes	Tab 7	
Section Index - Brakes		6-74800
Removal and Installation of Brake Components	7000	6-74810
Hydraulic Brake Troubleshooting	7002	6-74820
Master Cylinder	7003	6-74830
Hydraulics	Tab 8	
Section Index - Hydraulics		6-74842
Removal and Installation of Hydraulic Components	8001	6-74850
Removal and Installation of Hydraulic Components 590SM With Pilot Controls	8001	6-74761
Hydraulic System Specifications and Troubleshooting With Mechanical Controls	8002	6-74862
Hydraulic System Specifications and Troubleshooting 580M, 580SM, and 580SM+ With Pilot Controls	8002	6-74872
Hydraulic System Specifications and Troubleshooting 590SM With Pilot Controls	8002	6-74741
Cleaning the Hydraulic System	8003	6-74880
Hydraulic Pump 580SM, 580SM+ (all versions), and 590SM With Mechanical Controls	8004	6-74900

M SERIES 2 LOADER/BACKHOE

Service Manual

Bur 6-74432

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Hydraulics (Cont)	Tab 8	
Hydraulic Pump 590SM With Pilot Controls	8004	6-80010
Loader Control Valve 580M, 580SM 580SM+ (all versrions), and 590SM With Mechanical Controls	8005	6-74912
Loader Control Valve 590SM With Pilot Controls	8005	6-79930
Cylinders	8006	6-74920
Backhoe Control Valve With Mechanical Controls	8007	6-74931
Backhoe Control Valve With Pilot Controls 580M, 580SM and 580SM+	8007	6-74941
Backhoe Control Valve With Pilot Controls 590SM	8007	6-79940
Accumulator for Machines With Ride Control and Pilot Control Accumulator	8009	6-74960
Solenoid Valve for Machines with Optional Ride Control	8010	6-74970
Boom Lock Solenoid Valve	8011	6-74980
Quick Coupler	8012	6-74990
Swing Dampening Valve	8013	6-75000
Pilot Control Unit	8014	6-79950
Proportional Pilot Pressure Control	8015	6-79960
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-75011
Pedals and Levers	9001	6-75020
Air Conditioning Troubleshooting	9002	6-75031
Air Conditioning System Service	9004	6-75051
Air Conditioning Components Service	9005	6-75061
Loader	9006	6-75070
ROPS Cab and Canopy	9007	6-75080
Backhoe	9008	6-75090
Standard and Mechanical Suspension Seat	9009	6-75100
Sears Mechanical and Standard Suspension Seat	9009	6-80000
Air Suspension Seat	9010	6-75111
Rear Window Replacement	9012	6-75040
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	6-75122

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.