

[Click here to get the complete manual](#)

REPAIR MANUAL
CRAWLER DOZER

**650K
750K
850K
TIER 2
SERIES 3**

87364103 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
CRAWLER DOZER

**650K
750K
850K
TIER 2
SERIES 3**

87364103 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
CRAWLER DOZER

**650K
750K
850K
TIER 2
SERIES 3**

87364103 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
CRAWLER DOZER

**650K
750K
850K
TIER 2
SERIES 3**

87364103 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4



REPAIR MANUAL



**650K TIER II
750K TIER II
850K TIER II**

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A
FAULT CODES	A.50.A

POWER PRODUCTION B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

POWER TRAIN C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

TRAVELLING D

SERVICE BRAKE Hydraulic	D.30.C
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Tracks	D.50.B
Final drive	D.15.A

BODY AND STRUCTURE E

USER CONTROLS AND SEAT	E.32.A
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning	E.40.D

