

[Click here to get the complete manual](#)

850M
Tier 4A (interim)
Crawler Dozer

*PIN NDDC83000 and above; PIN NEDC80000 and above;
PIN NFDC80000 and above; PIN NFCI03000 and above*

SERVICE MANUAL

Part number 51418566

2nd edition English

November 2017

Replaces part number 47907864





SERVICE MANUAL

850M Long Track (LT) - Tier 4A (interim) [NFC103000 -], 850M Long Track (LT) [NDDC83000 -], 850M Long Track (LT) [NEDC80000 -], 850M Long Track (LT) [NFDC80000 -], 850M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4A (interim) [NFC103000 -], 850M Wide Track (WT) / Low Ground Pressure (LGP) [NDDC83000 -], 850M Wide Track (WT) / Low Ground Pressure (LGP) [NEDC80000 -], 850M Wide Track (WT) / Low Ground Pressure (LGP) [NFDC80000 -]

Link Product / Engine

Product	Market Product	Engine
850M Long Track (LT) - Tier 4A (interim) [NFC103000 -]	North America	F4HFE413P*A001
850M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4A (interim) [NFC103000 -]	North America	F4HFE413P*A001
850M Long Track (LT) [NDDC83000 -]	North America	F4HFE413P*A001
850M Long Track (LT) [NEDC80000 -]	North America	F4HFE413P*A001
850M Long Track (LT) [NFDC80000 -]	North America	F4HFE413P*A001
850M Wide Track (WT) / Low Ground Pressure (LGP) [NDDC83000 -]	North America	F4HFE413P*A001
850M Wide Track (WT) / Low Ground Pressure (LGP) [NEDC80000 -]	North America	F4HFE413P*A001
850M Wide Track (WT) / Low Ground Pressure (LGP) [NFDC80000 -]	North America	F4HFE413P*A001

Contents

INTRODUCTION

Maintenance	00
[00.150] Start-up.....	00.1
[00.AAA] Maintenance generic sub-group.....	00.2
Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.250] Turbocharger and lines.....	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.310] Aftercooler.....	10.9
[10.304] Engine lubrication system.....	10.10
Power coupling.....	19
[19.100] Drive shaft.....	19.1
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
[29.202] Hydrostatic transmission	29.2
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2

[35.104] Fixed displacement pump	35.3
[35.359] Main control valve	35.4
[35.525] Auxiliary hydraulic valves and lines	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
[48.140] Dropbox and final drive	48.5
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14

[55.988] Selective Catalytic Reduction (SCR) electrical system	55.15
[55.DTC] FAULT CODES	55.16
Lubrication system	71
[71.460] Grease lubrication system	71.1
Dozer blade and arm	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89
[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.151] Cab interior	90.2
[90.154] Cab doors and hatches	90.3
[90.120] Mechanically-adjusted operator seat	90.4
[90.124] Pneumatically-adjusted operator seat	90.5
[90.100] Engine hood and panels	90.6