


[Click here to get the complete manual](#)

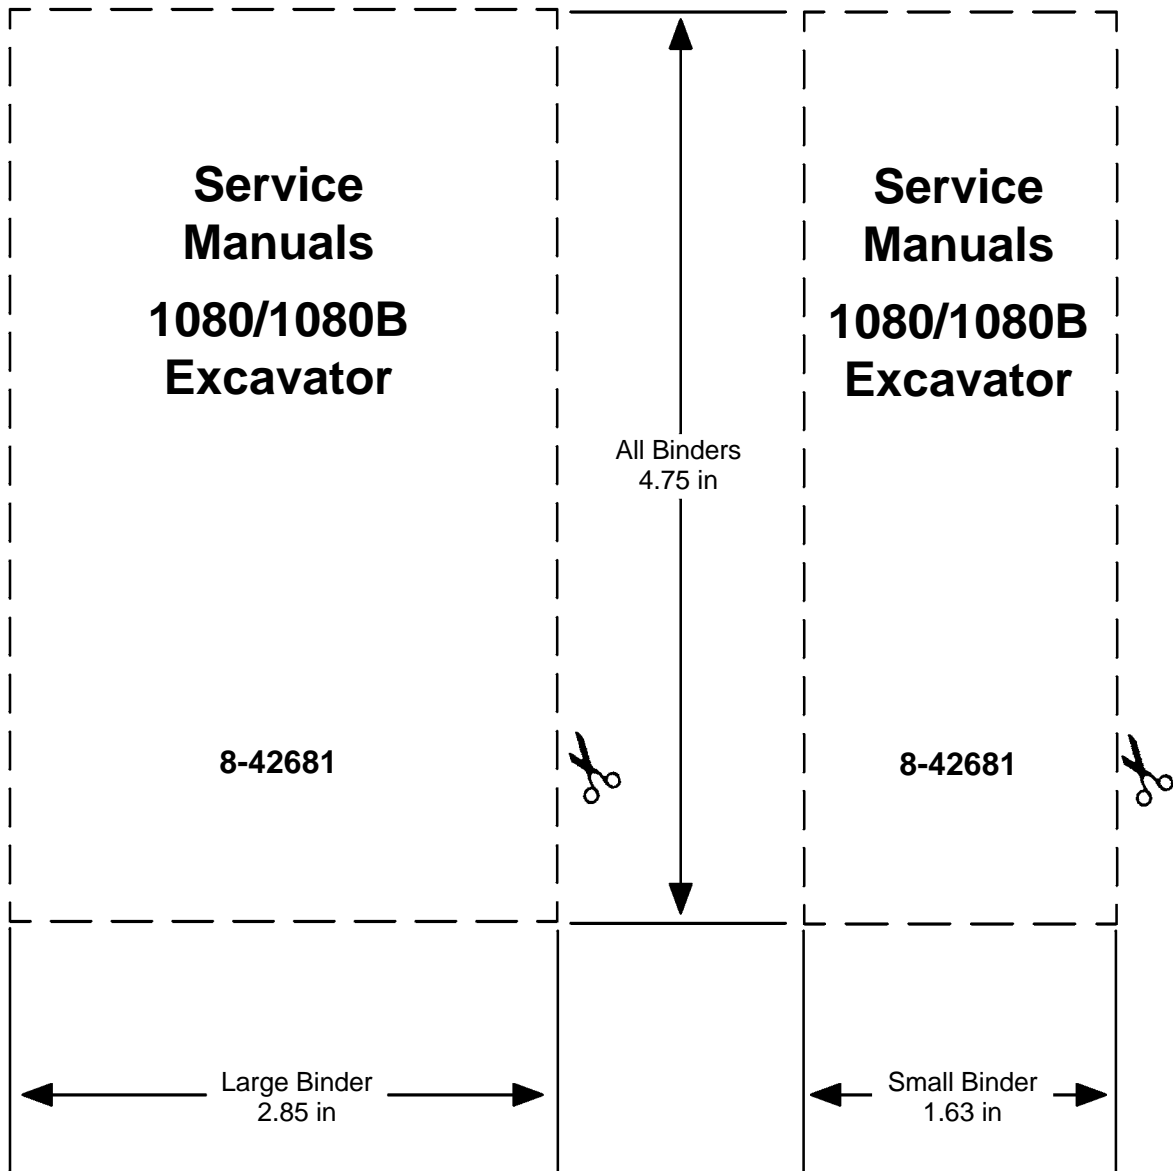

# 1080/1080B EXCAVATOR TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
<b>1 GENERAL</b>		
Safety Rules, Service Manual Introduction, and Torque Specifications .....	1001	8-42680
Maintenance and Lubrication .....	1002	8-42680
General Engine Specifications (Case Engine) - 1080 .....	1010	8-25780
General Engine Specifications (Case Engine) - 1080B .....	1010	8-27550
Detailed Engine Specifications (Case Engine) - 1080B .....	1020	8-22760
Detailed Engine Specifications (Case Engine) - 1080 .....	1320	8-20040
<b>2 ENGINE</b>		
Engine and Radiator Removal and Installation .....	2000	8-42680
Engine Accessories (Air Cleaner, Ether Injection System, Turbocharger, Pump Drive Plate, Exhaust System) .....	2001	8-42680
Engine Tune-Up .....	2002	9-76379
Cylinder Head, Valve Train, and Camshaft .....	2015	8-22560
Cylinder Block, Sleeves, Pistons and Rods .....	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals .....	2035	9-76187
Lubrication System (1080B) .....	2045	9-78046
Lubrication System (1080) .....	2046	8-22780
Cooling System .....	2055	9-76337
Engine Troubleshooting .....	2201	8-20111
Reconditioning Large Bore Case Engine Blocks .....	2290	8-21170
Turbocharger Failure Analysis .....	2565	9-78235
Detroit Diesel Engine Manual - In Line 71		6-SE-250
<b>3 FUEL SYSTEM</b>		
Fuel Lines, Fuel Tank, and Engine Controls .....	3001	8-42680
Fuel System and Filters .....	3010	9-75297
Robert Bosch Fuel Injection Pump .....	3012	9-74937
17 mm Fuel Injectors .....	3213	8-20240
<b>4 ELECTRICAL</b>		
Electrical System Specifications and Troubleshooting .....	4002	8-42681
Wiring Schematics .....	4003	8-42681
Batteries .....	4005	8-42680
Starter .....	4006	8-41430
Alternator .....	4007	8-42680
<b>5 TRACK AND SUSPENSION</b>		
Troubleshooting the Track System .....	5502	8-42680
Track Chain and Shoes .....	5503	8-42681
Track Rollers, Carriers Rollers, Idlers, Track Adjuster Cylinders, and Sprockets .....	5506	8-42681
<b>6 POWER TRAIN</b>		
Troubleshooting .....	6302	8-38240
Drive Motor Circuit and Lines .....	6311	8-42680
Drive Motor .....	6312	8-42680
Final Drive Transmission (1080) .....	6317	8-42681
Final Drive Transmission (1080B) .....	6318	8-42680

DIVISION/SECTION	SECTION NO.	FORM NO.
<b>7 BRAKES</b>		
House Brakes .....	7011	8-38240
Drive Brakes .....	7012	8-42680
<b>8 HYDRAULICS</b>		
Maintenance and Service .....	8201	8-42680
Hydraulic System Specifications, Schematics, Troubleshooting, Pressure Checks, and Flowmeter Tests .....	8202	8-42681
Hydraulic Pump .....	8205	8-42680
Control Valves .....	8207	8-42680
Swing Hydraulic Circuit, Swing Motor, and Swing Relief Valve .....	8210	8-42681
Boom Hydraulic Circuit .....	8211	8-42681
Dipper Hydraulic Circuit .....	8212	8-42681
Bucket Hydraulic Circuit .....	8213	8-42681
Leveler Hydraulic Circuit .....	8215	8-42681
Hydraulic Swivel .....	8218	8-42681
Pilot Control System .....	8220	8-42681
Power Sensing Valve .....	8221	8-38240
Cylinders .....	8290	8-42681
<b>9 MOUNTED EQUIPMENT</b>		
Troubleshooting (Swing Mechanism) .....	9202	8-38240
Swing Gearbox .....	9210	8-42681
Boom .....	9211	8-42681
Attachments (Wrist-O-Twist, Buckets) .....	9213	8-42681
Turntable Leveler .....	9215	8-38230
Turntable Bearing and Related Parts .....	9216	8-42681
Decals and Painting .....	9221	8-42681
<b>REAR POCKET</b>		
Electrical Schematic (1080) .....		830882A
Electrical Schematic (1080B) .....		860505
Hydraulic Schematic (Pilot Controls Two Speed Drive Motor) - 1080 and 1080B .....		840970
Hydraulic Schematic (Pilot Controls Single Speed Drive Motor) - 1080 .....		840971
Hydraulic Schematic (Hydraulic Circuits) - 1080 and 1080B .....		840972