

[Click here to get the complete manual](#)

# **CX18C**

## Mini Excavator

# SERVICE MANUAL

**Part number 48139721**

English  
June 2017

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**CX18C Cab - Tier IV Engine**  
**CX18C Canopy - Tier IV Engine**

# Contents

---

## INTRODUCTION

|                                                         |       |
|---------------------------------------------------------|-------|
| Engine.....                                             | 10    |
| [10.001] Engine and crankcase .....                     | 10.1  |
| [10.106] Valve drive and gears .....                    | 10.2  |
| [10.101] Cylinder heads .....                           | 10.3  |
| [10.105] Connecting rods and pistons.....               | 10.4  |
| [10.103] Crankshaft and flywheel.....                   | 10.5  |
| [10.216] Fuel tanks .....                               | 10.6  |
| [10.206] Fuel filters .....                             | 10.7  |
| [10.220] Throttle linkage.....                          | 10.8  |
| [10.218] Fuel injection system.....                     | 10.9  |
| [10.202] Air cleaners and lines .....                   | 10.10 |
| [10.254] Intake and exhaust manifolds and muffler ..... | 10.11 |
| [10.400] Engine cooling system .....                    | 10.12 |
| [10.414] Fan and drive .....                            | 10.13 |
| [10.304] Engine lubrication system.....                 | 10.14 |
| Hydraulic systems.....                                  | 35    |
| [35.000] Hydraulic systems.....                         | 35.1  |
| [35.300] Reservoir, cooler, and filters.....            | 35.2  |
| [35.106] Variable displacement pump .....               | 35.3  |
| [35.359] Main control valve.....                        | 35.4  |
| [35.357] Pilot system .....                             | 35.5  |
| [35.355] Hydraulic hand control .....                   | 35.6  |
| [35.356] Hydraulic foot control.....                    | 35.7  |
| [35.352] Hydraulic swing system .....                   | 35.8  |
| [35.353] Hydraulic travel system .....                  | 35.9  |
| [35.354] Hydraulic central joint .....                  | 35.10 |

|                                                             |           |
|-------------------------------------------------------------|-----------|
| [35.735] Track frame widening system .....                  | 35.11     |
| [35.736] Boom hydraulic system .....                        | 35.12     |
| [35.737] Dipper hydraulic system.....                       | 35.13     |
| [35.738] Excavator and backhoe bucket hydraulic system..... | 35.14     |
| [35.734] Tool quick coupler hydraulic system .....          | 35.15     |
| [35.739] Swing arm hydraulic system .....                   | 35.16     |
| [35.741] Dozer blade cylinders .....                        | 35.17     |
| <b>Frames and ballasting .....</b>                          | <b>39</b> |
| [39.140] Ballasts and supports .....                        | 39.1      |
| <b>Tracks and track suspension.....</b>                     | <b>48</b> |
| [48.130] Track frame and driving wheels.....                | 48.1      |
| [48.100] Tracks .....                                       | 48.2      |
| [48.134] Track tension units .....                          | 48.3      |
| [48.138] Track rollers .....                                | 48.4      |
| <b>Electrical systems .....</b>                             | <b>55</b> |
| [55.000] Electrical system .....                            | 55.1      |
| [55.100] Harnesses and connectors.....                      | 55.2      |
| [55.525] Cab engine controls.....                           | 55.3      |
| [55.015] Engine control system.....                         | 55.4      |
| [55.201] Engine starting system.....                        | 55.5      |
| [55.301] Alternator.....                                    | 55.6      |
| [55.302] Battery.....                                       | 55.7      |
| [55.202] Cold start aid .....                               | 55.8      |
| [55.011] Fuel tank system .....                             | 55.9      |
| [55.014] Engine intake and exhaust system.....              | 55.10     |
| [55.012] Engine cooling system .....                        | 55.11     |
| [55.013] Engine oil system .....                            | 55.12     |
| [55.512] Cab controls.....                                  | 55.13     |

|                                                              |           |
|--------------------------------------------------------------|-----------|
| [55.524] Cab controls (Lift arm, Boom, Dipper, Bucket) ..... | 55.14     |
| [55.518] Wiper and washer system.....                        | 55.15     |
| [55.404] External lighting .....                             | 55.16     |
| [55.405] External lighting switches and relays .....         | 55.17     |
| [55.514] Cab lighting .....                                  | 55.18     |
| [55.408] Warning indicators, alarms, and instruments .....   | 55.19     |
| <b>Booms, dippers, and buckets .....</b>                     | <b>84</b> |
| [84.910] Boom .....                                          | 84.1      |
| [84.912] Dipper arm .....                                    | 84.2      |
| [84.100] Bucket.....                                         | 84.3      |
| <b>Dozer blade and arm.....</b>                              | <b>86</b> |
| [86.110] Dozer blade .....                                   | 86.1      |
| <b>Platform, cab, bodywork, and decals .....</b>             | <b>90</b> |
| [90.160] Cab interior trim and panels.....                   | 90.1      |
| [90.114] Operator protections .....                          | 90.2      |
| [90.120] Mechanically-adjusted operator seat.....            | 90.3      |
| [90.100] Engine hood and panels .....                        | 90.4      |
| [90.105] Machine shields and guards .....                    | 90.5      |