

# HYDRAULIC EXCAVATOR

## SHOP MANUAL

## CASE CX25

### INDEX

|   |                                                     |
|---|-----------------------------------------------------|
| 1 | SPECIFICATIONS                                      |
| 2 | MAINTENANCE                                         |
| 3 | SYSTEM                                              |
| 4 | DISASSEMBLING                                       |
| 5 | TROUBLESHOOTING                                     |
| 6 | ENGINE                                              |
| 7 | INSTALLATION PROCEDURES<br>FOR OPTIONAL ATTACHMENTS |

SPECIFICATIONS

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT

# CASE

Book Code No. **S5PV001E** ①

**Shop Manual Model Number Cross Reference:**  
**SK25SR-2 is CASE Model CX25**

# INDEX

SK25SR-2

| Book Code No.<br>Issued Year-Month |  |  |                 | Title                                        | Index No. |
|------------------------------------|--|--|-----------------|----------------------------------------------|-----------|
| S5PV0101E<br>2000-12               |  |  | SPECIFICATIONS  | PRELIMINARY REMARKS                          | PV01      |
| S5PV0201E①<br>2001-10              |  |  |                 | SPECIFICATIONS                               | PV02      |
| S5PV0301E①<br>2001-10              |  |  |                 | ATTACHMENT                                   | PV03      |
| S5PV1101E①<br>2001-10              |  |  | MAINTENANCE     | TOOLS                                        | PV11      |
| S5PV1201E①<br>2001-10              |  |  |                 | STANDARD MAINTENANCE<br>TIME TABLE           | PV12      |
| S5PV1301E①<br>2001-10              |  |  |                 | MAINTENANCE STANDARDS<br>AND TEST PROCEDURES | PV13      |
| —                                  |  |  | SYSTEM          |                                              |           |
| S5PV2201E①<br>2001-10              |  |  |                 | HYDRAULIC SYSTEM                             | PV22      |
| S5PV2301E①<br>2001-10              |  |  |                 | ELECTRICAL SYSTEM                            | PV23      |
| S5PV2401E①<br>2001-10              |  |  |                 | COMPONENTS SYSTEM                            | PV24      |
| —                                  |  |  |                 |                                              |           |
| —                                  |  |  |                 |                                              |           |
| S5PV3101E<br>2000-12               |  |  | DISASSEMBLING   | WHOLE DISASSEMBLING<br>& ASSEMBLING          | PV31      |
| S5PV3201E①<br>2001-10              |  |  |                 | ATTACHMENTS                                  | PV32      |
| S5PV3301E①<br>2001-10              |  |  |                 | UPPER SLEWING<br>STRUCTURE                   | PV33      |
| S5PV3401E<br>2000-12               |  |  |                 | TRAVEL SYSTEM                                | PV34      |
| —                                  |  |  | TROUBLESHOOTING |                                              |           |
| S5PV4201E<br>2000-12               |  |  |                 | HYDRAULIC SYSTEM                             | PV42      |
| S5PV4301E<br>2000-12               |  |  |                 | ELECTRICAL SYSTEM                            | PV43      |
| S5PV4401E<br>2000-12               |  |  |                 | ENGINE                                       | PV44      |
| S5PV5101E<br>2000-12               |  |  | E/G             | ENGINE                                       | PV51      |
|                                    |  |  | OPT             |                                              |           |
|                                    |  |  |                 |                                              |           |
| PV08-20001~                        |  |  |                 | APPLICABLE MACHINES                          |           |