

CRAWLER EXCAVATOR CX135SR TIER 3 SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data.....	1001	7-27691EN
General specifications and special torque setting	1002	SC135SR1002-1EN
2 ENGINE		
Removal and installation of the engine.....	2000	SM135SR2000-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Removal and installation of the fuel tank.....	3001	SM135SR3001-0EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical and engine functions and service support	4001	SC135SR4001-1EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	SM75SR5001-0EN
Rollers	5003	SM135SR5003-0EN
Take-up roller.....	5005	SM135SR5005-0EN
6 DRIVE TRAIN		
Removal and installation of the drive motor and final drive transmission.....	6001	SM135SR6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM135SR6002-0EN
Removal and installation of the swing motor and swing reduction gear	6003	SM135SR6003-0EN
Disassembly and assembly of the swing reduction gear	6004	SM135SR6004-0EN
7 UNDERCARRIAGE HYDRAULICS		

* Consult the Engine Service Manual

DIVISION/SECTION	SECTION N°	REFERENCE N°
8 UPPERSTRUCTURE HYDRAULICS		
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SC135SR8001-1EN
Removal and installation of the hydraulic reservoir	8002	SM135SR8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM135SR8003-0EN
Removal and installation of the main hydraulic control valve.....	8004	SM135SR8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM135SR8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM135SR8006-0EN
Removal and installation of the pilot blocs.....	8007	SM75SR8007-0EN
Disassembly and assembly of the main hydraulic pump	8010	SM135SR8010-0EN
Disassembly and assembly of the main hydraulic control valve	8011	SM135SR8011-0EN
Disassembly and assembly of the attachment cylinders	8012	SM135SR8012-0EN
Disassembly and assembly of the hand control levers	8013	SM75SR8013-0EN
Disassembly and assembly of the foot control levers	8014	SM135SR8014-0EN
Disassembly and assembly of the solenoid valve block	8015	SM75SR8015-0EN
Disassembly and assembly of the cushion valve	8016	SM135SR8016-0EN
Disassembly and assembly of the hydraulic swivel	8018	SM135SR8018-0EN
Disassembly and assembly of the swing motor	8019	SM135SR8019-0EN
Hydraulic functions	8020	SC135SR8020-1EN
Hydraulic component functions.....	8030	SC135SR8030-0EN
9 UPPERSTRUCTURE		
Air conditioning unit	9007	SM75SR9007-0EN
Large size hydraulic schematics	Pocket	87746256A
Large size hydraulic schematics - 2PC and dozer blade	Pocket	KMJ12340-12350
Large size electrical schematics	Pocket	87746249A

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.