

[Click here to get the complete manual](#)

SERVICE MANUAL

Crawler Excavator

CX240

7-29051

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Crawler Excavator

CX240

7-29051

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Crawler Excavator

CX240

7-29051

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Crawler Excavator

CX240

7-29051

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

CX240 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-28590
General specifications and special torque setting.....	1002	7-28671
Numerical value conversion table	1003	9-35540
2 ENGINE		
Removal and installation of the engine	2000	
Radiator and oil-cooler.....	2001	
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	7-27970GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	7-28361
Inspection and maintenance of batteries and connecting a booster battery	4002	7-27921GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	7-27750GB
Rollers.....	5003	7-27770GB
Sprocket.....	5004	7-27781GB
Idler wheel and tension shock absorber	5005	7-27801GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly	6002	7-28090GB
Swing reduction gear, removal and installation.....	6003	
Swing reduction gear, disassembly and assembly	6004	7-28390GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	7-27951GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-28551
Hydraulic reservoir removal and installation	8002	7-27990GB
Main and pilot pumps, removal and installation	8003	
Main hydraulic control valve, removal and installation.....	8004	7-27890GB
Attachment cylinders, removal and installation.....	8005	7-27791GB
Hydraulic swivel, removal and installation	8006	7-27811GB
Pilot blocs, removal and installation.....	8007	9-35590
Swing motor, removal and installation	8008	
Disassembly and assembly of the free swing valve.....	8009	9-35530
Main hydraulic pump, disassembly and assembly.....	8010	
Main hydraulic control valve, disassembly and assembly.....	8011	
Attachment cylinders, disassembly and assembly.....	8012	9-35500
Hand control levers, disassembly and assembly	8013	7-28110GB
Foot control levers, disassembly and assembly	8014	7-28210GB
Six-solenoid valves, disassembly and assembly	8015	7-27910GB
Caution valve, disassembly and assembly	8016	7-27940GB
Safety valve	8017	7-29630GB
Hydraulic swivel, disassembly and assembly	8018	7-28080GB
Swing motor, disassembly and assembly	8019	7-29760GB
Hydraulic functions.....	8020	7-28610

Reprinted

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight.....	9002	7-27981GB
Boom, dipper and bucket.....	9003	7-27961GB
Seat and seat belt.....	9004	7-28120GB
Cab and cab equipment.....	9005	
Air conditioner troubleshooting and system checks.....	9006	9-88730GB
Air conditioning unit disassembly and assembly.....	9007	
Air conditioning servicing	9008	
Air conditioning components.....	9009	
Large format hydraulic and electrical schematics	Pocket	7-28530

* Consult the Engine Service Manual

Sections to be distributed at a later date

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.