

[Click here to get the complete manual](#)

**SERVICE MANUAL**

Crawler Excavators

CX460

9-53600

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**SERVICE MANUAL**

Crawler Excavators

CX460

9-53600

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**SERVICE MANUAL**

Crawler Excavators

CX460

9-53600

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**SERVICE MANUAL**

Crawler Excavators

CX460

9-53600

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

# CX460 Crawler Excavators

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	9-53360
General specifications and special torque setting.....	1002	9-53800
<b>2 ENGINE</b>		
Removal and installation of the engine .....	2000	9-54180GB
Radiator and oil-cooler.....	2001	9-43480GB
Engine specifications .....	*	
Disassembly and assembly of the engine.....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank .....	3001	9-43470GB
Fuel engine system.....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting .....	4001	9-57920
Inspection and maintenance of batteries and connecting a booster battery....	4002	9-43460GB
Main and engine electronic control boxes.....	4003	9-43450GB
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	9-42910GB
Rollers.....	5003	9-44830GB
Sprocket.....	5004	9-36890GB
Idler wheel and tension shock absorber .....	5005	9-44820GB
<b>6 DRIVE TRAIN</b>		
Drive motor and final drive transmission removal and installation .....	6001	9-43140GB
Swing reduction gear, removal and installation.....	6003	9-44810GB
Swing reduction gear, disassembly and assembly .....	6004	9-44590GB
Travel reduction gear assembly and disassembly .....	6005	9-53710GB
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	9-44560GB
Specifications, troubleshooting, checks and hydraulic pressure settings .....	8001	9-53810
Hydraulic reservoir removal and installation .....	8002	9-43230GB
Main and pilot pumps, removal and installation .....	8003	9-53950GB
Main hydraulic control valve, removal and installation.....	8004	9-53990GB
Attachment cylinders, removal and installation.....	8005	9-43250GB
Hydraulic swivel, removal and installation .....	8006	9-43390GB
Pilot blocs, removal and installation.....	8007	9-53980GB
Swing motor, removal and installation .....	8008	9-53970GB
Free swing disassembly and assembly .....	8009	9-35530
Main hydraulic pump, disassembly and assembly.....	8010	9-43330GB
Main hydraulic control valve, disassembly and assembly.....	8011	9-54310GB
Attachment cylinders, disassembly and assembly.....	8012	9-53690GB
Hand control levers, disassembly and assembly .....	8013	9-54000GB
Foot control levers, disassembly and assembly .....	8014	7-28210GB
Six-solenoid valves, disassembly and assembly .....	8015	9-54050GB
Caution valve, disassembly and assembly .....	8016	7-27942GB
Anti hose burst valve.....	8017	9-54100GB
Hydraulic swivel, disassembly and assembly .....	8018	9-43190GB
Swing motor, disassembly and assembly .....	8019	9-54140GB
Hydraulic functions.....	8020	9-42740GB
Travel hydraulic motor, disassembly and assembly .....	8021	9-43160GB

Copyright © 2003 CNH France SA

Printed in France

January 2003

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>9    UPPERSTRUCTURE</b>		
Upperstructure, turntable and counterweight.....	9002	9-43410GB
Boom, dipper and bucket .....	9003	9-53280GB
Seat and seat belt .....	9004	9-40960GB
Cab and cab equipment.....	9005	9-53410GB
Air conditioning troubleshooting.....	9006	
Air conditioning unit disassembly and assembly.....	9007	
Air conditioning servicing .....	9008	
Air conditioning components .....	9009	
Attachment reinforcement procedures .....	9012	
Large format hydraulic and electrical schematics .....	Pocket	
		9-43930
		9-43180

\* Consult the Engine Service Manual

**Sections to be distributed at a later date**

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.