

[Click here to get the complete manual](#)

# **Vibratory Rollers SV212 and SV216**

## **Service Manual**

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Copyright © 2001 Case France  
Printed in France  
April 2001

# **CONTENTS**

## **SECTION 00 - MAINTENANCE**

### **CHAPTER 1 - General Instructions**

<b>Description</b>	<b>Page</b>
Introduction .....	1
Safety instructions.....	3
Environmental measures and health precautions.....	6
Product identification.....	8
Torque specifications .....	9

### **CHAPTER 2 - General Specifications**

<b>Description</b>	<b>Page</b>
Description of the machine .....	1
Fluids and lubricants .....	2
Specifications.....	5
Overall machine dimensions.....	9

### **CHAPTER 3 - Troubleshooting**

<b>Description</b>	<b>Page</b>
Troubleshooting - Engine.....	2
Troubleshooting - Hydraulic system oil overheating - emulsifying.....	3
Troubleshooting - Vibration.....	3
Troubleshooting - Travel.....	5
Troubleshooting - Brakes.....	6
Troubleshooting - Steering.....	6

## **SECTION 10 - ENGINE**

### **CHAPTER 1 - Removal and installation**

<b>Description</b>	<b>Page</b>
Specifications.....	1
Description .....	2
Torque specifications .....	4
Special tools.....	4
Removal.....	6
Installation.....	13
Accelerator cable assembly removal and installation .....	13

**SECTION 21 - TRANSMISSION****CHAPTER 1 - Hydraulic motor**

Description	Page
Description .....	2
Specifications .....	3
Torque specifications .....	3
Disassembly .....	3
Reconditioning and replacement .....	5
Assembly .....	8

**CHAPTER 2 - Travel reduction gear**

Description	Page
Specification .....	1
Torque specifications .....	2
Special tools .....	2
Exploded view of travel brake .....	6
Disassembly and assembly .....	7
Brake test .....	9
Exploded view .....	10
Disassembly and assembly .....	11

**SECTION 29 - HYDROSTATIC DRIVE****CHAPTER 1 - Pumps - Cento drive coupling**

Description	Page
Specifications .....	1
Tightening torque .....	1
Description .....	2
Special tools .....	3
Removal of pumps, Cento clutch .....	3
Cento drive coupling .....	7

**SECTION 35 - HYDRAULIC SYSTEM****CHAPTER 1 - Hydraulic cylinders**

Description	Page
Torque Specifications .....	1
Description .....	2
Special tools .....	3
Hood hydraulic cylinders .....	5
Cab hydraulic cylinder .....	7
Hydraulic cylinders .....	7