

[Click here to get the complete manual](#)

The CASE logo is displayed in white, bold, italicized capital letters. It is positioned on a black trapezoidal background that tapers to the right. A horizontal orange bar is located directly beneath the letters.

**REPAIR MANUAL**  
**SKID STEER**

**430**  
**440**  
**440CT**  
**SERIES 3**

87634767 NA

Issued 01Jan08

**REPAIR MANUAL**  
**SKID STEER / TRACK LOADERS**

**430  
440  
440CT  
SERIES 3**

**87634767 NA**

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**REPAIR MANUAL**  
**SKID STEER / TRACK LOADERS**

**430  
440  
440CT  
SERIES 3**

**87634767 NA**

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**REPAIR MANUAL**  
**SKID STEER / TRACK LOADERS**

**430  
440  
440CT  
SERIES 3**

**87634767 NA**

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

**REPAIR MANUAL**  
**SKID STEER / TRACK LOADERS**

**430  
440  
440CT  
SERIES 3**

**87634767 NA**

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents

Description	Section Number	Publication Form Number
<b>General</b>		
		<b>Tab 1</b>
Section Index - General		6-79151
Fluids and Lubricants	1001	6-79031
Fluids and Lubricants Tier 3 Engines	1001	5-9520
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
<b>Engines</b>		
		<b>Tab 2</b>
Section Index - Engines		6-79161
Engine and Radiator Removal and Installation	2000	6-79290
Engine and Radiator Removal and Installation (430 Tier 3 Engine)	2000	5-9540
Engine and Radiator Removal and Installation (440/440CT Tier 3 Engine)	2000	5-9550
For Engine Repair - See Engine Service Manual		6-74500
For 430 Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87693888
For 440/440CT Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87630273
<b>Fuel Systems</b>		
		<b>Tab 3</b>
Section Index - Fuel Systems		6-79171
For Fuel System Repair - See the Engine Service Manual		6-74500
For 430 Tier 3 Fuel System Repair - See Tier 3 Engine Repair Manual		87693888
For 440/440CT Tier 3 Fuel System Repair - See Tier 3 Engine Repair Manual		87630273
<b>Electrical</b>		
		<b>Tab 4</b>
Section Index - Electrical		6-79182
Electrical System Specifications, Troubleshooting, and Schematics (Mechanical and Pilot Control Machines)	4001	6-79371
Electrical System Specifications, Troubleshooting, and Schematics (Tier 3 and Cab Up-Grade Machines)	4001	5-9600
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53091

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents (Continued)

Description	Section Number	Publication Form Number
<b>Tracks</b> <span style="float: right;"><b>Tab 5</b></span>		
Section Index - Tracks		5-2630
Tracks	5001	5-2610
Drive Sprocket, Idler Wheels, and Rollers	5002	5-2620
<b>Power Train</b> <span style="float: right;"><b>Tab 6</b></span>		
Section Index - Power Train		6-79192
Hydrostatic System "How it Works" (ISO- Pattern and H-Pattern Pilot Control Machines)	6000	5-4930
Hydrostatic System Troubleshooting	6001	6-79331
Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)	6001	5-4910
Removal and Installation of Hydrostatic Components (Mechanical and Pilot Control Machines)	6002	6-79322
Drive Coupling	6003	6-79230
Drive Coupling Tier 3 Engines	6003	5-9530
Piston Pump	6004	6-49580
Piston Pump (Machines Equipped with Pilot Controls)	6004	5-4921
Drive Motors Single Speed	6005	6-79000
Drive Motors Two Speed	6005	6-79010
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310
<b>Brakes</b> <span style="float: right;"><b>Tab 7</b></span>		
Section Index - Brakes		6-79200
Removal and Installation of Park Brake Components	7002	6-79441
<b>Hydraulics</b> <span style="float: right;"><b>Tab 8</b></span>		
Section Index - Hydraulics		6-79212
Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot Control Machines)	8001	6-79342
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79431
Gear Pump (Equipment and High Flow)	8004	6-79350
Loader Control Valve	8005	5-2640
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents (Continued)

Description	Section Number	Publication Form Number
<b>Mounted Equipment</b>		
	<b>Tab 9</b>	
Section Index - Mounted Equipment		6-79221
Pedals and Levers	9001	6-79421
Pedals and Levers (Cab Up-Grade Machines)	9001	5-9560
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
ROPS Canopy, Seat, Seat Belts, and Operators Compartment (Cab Up-Grade Machines)	9004	5-9460
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant	9011	6-79460
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9011	5-9480
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant	9012	6-79470
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9012	5-9490
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging	9013	6-79480
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging (Cab Up-Grade Machines)	9013	5-9500
Air Conditioner Component Service for Systems with R-134A Refrigerant	9014	6-79490
Air Conditioner Component Service for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9014	5-9510
<b>Schematic Set</b>		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	5-5351
Hydraulic and Electrical Schematic Foldout (Tier 3 Cab Up-Grade and Pilot Control Machines)	In Rear Pocket	5-9620