

[Click here to get the complete manual](#)

1840 SKID STEER
Service Manual
8-11093
Table of Contents

Description	Section No.	Publication Form No.
General		
	Tab 1	
Section Index - General		8-11280
Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-11292
Engines		
	Tab 2	
Section Index - Engine		8-11300
Engine and Radiator Removal and Installation	2001	8-11310
Specification Details	2402	8-24163
Cylinder Head and Valve Train	2415	8-24173
Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Main Bearings, Oil Seals and Flywheel	2425	8-24183
Lubrication System	2445	8-24193
Cooling System	2455	8-24203
Fuel System		
	Tab 3	
Section Index - Fuel System		8-11321
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24233
CAV Injection Pump (4-390)1	3414	7-37131
Electrical		
	Tab 4	
Section Index - Electrical		8-11331
Electrical "How it Works"	4000	7-14020
Removal and Installation of Electrical Components	4001	8-11340
Electrical Specifications and Troubleshooting and Schematics	4002	8-17753
Battery	4003	8-11360
Starter	4004	8-11370
65 Ampere Alternator A187873	4007	8-15670
65 Ampere Alternator A186125	4019	8-11381
Power Train		
	Tab 6	
Section Index - Power Train		8-11391
Hydrostatic How It Works	6000	7-14030
Removal and Installation of Power Train Components	6001	8-11401

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Bur 8-11653

Reprinted

Copyright © 2001 Case Corporation
Printed in U.S.A.
Issued May, 1992 (Revised February, 2001)

Table of Contents

Description	Section No.	Publication Form No.
Hydrostatic Drive System Troubleshooting	6002	8-11413
Controls	6003	7-44300
Piston Pump	6004	8-44180
Motor	6005	8-68601
Pump Drive Coupling	6006	8-11450
Sprockets, Chains and Axles	6007	8-11441
Wheels and Tires	6008	8-11461
Hydraulics	Tab 8	
Section index - Hydraulics		8-11491
How It Works	8000	7-14040
Removal and Installation of Hydraulic Components	8001	8-11500
Hydraulic System Specifications and Troubleshooting and Schematics	8002	8-11513
Cleaning the Hydraulic System and Hydrostatic System	8003	8-11520
Pump	8004	8-11530
Loader Control Valve	8005	8-11541
Auxiliary Control Valve	8006	8-11550
Backhoe Control Valve - D100 Backhoe	8007	8-11561
Backhoe Control Valve - D125 Backhoe	8007	7-44240
Cylinders	8009	8-11582
Mounted Equipment	Tab 9	
Section index - Mounted Equipment		8-11591
Control Linkages, Pedals and Levers "How it Works"	9000	7-14050
Pedals and Levers	9001	8-11603
Loader	9002	8-11611
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9003	8-11621
Auxiliary Hydraulic Installation	9004	8-11630
Backhoe (D100 Backhoe)	9005	8-11640
Backhoe (D125 Backhoe)	9005	7-44270
Rear Pocket		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	7-11951

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants	1002
Detailed Engine Specifications	1024