

[Click here to get the complete manual](#)

SRI30 SR200

SRI50 SR220

SRI75 SR250

SVI85 SV250

SV300

Alpha Series Skid Steer Loader

TR270

TR320

TV380

Alpha Series Compact Track Loader

SERVICE MANUAL

Part number 84423866

1st edition English

July 2011

CASE
CONSTRUCTION

Contents

INTRODUCTION

HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM.....	A.12.A
HYDRAULIC COMMAND SYSTEM.....	A.14.A
HIGH-FLOW HYDRAULIC POWER SYSTEM.....	A.16.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM.....	A.40.A
ELECTRONIC SYSTEM	A.50.A
FAULT CODES.....	A.50.A

ENGINE AND PTO IN B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
AIR INTAKE SYSTEM.....	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
STARTING SYSTEM	B.80.A

TRANSMISSION, DRIVE AND PTO OUT C

TRANSMISSION Hydrostatic.....	C.20.F
-------------------------------	--------

AXLES, BRAKES AND STEERING..... D

Final drive	D.15.A
Final drive Hydraulic drive.....	D.15.C
STEERING Mechanical	D.20.B
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Tracks	D.50.B
WHEELS AND TRACKS Wheels.....	D.50.C

FRAME AND CAB E

FRAME Primary frame	E.10.B
SHIELD.....	E.20.A

USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C
SAFETY SECURITY ACCESSORIES Safety	E.50.B
FRAME POSITIONING	F
STABILISING Ballasting	F.20.B
TOOL POSITIONING	G
LIFTING	G.10.A
TILTING	G.20.A
LEVELLING	G.30.A
SECONDARY FUNCTIONS Hydraulic	G.90.C
HITCH AND WORKING TOOL	H
BOOM Lift	H.20.B
ARM TOOL ATTACHMENT Tilt	H.30.C
SINGLE ARM Lift	H.40.B
SINGLE ARM TOOL ATTACHMENT Tilt	H.50.C
EXCAVATING AND LANDSCAPING	J
DIGGING Non-articulated digging tools	J.20.B
CARRYING Unarticulated tools	J.50.B
COUPLING Mechanical coupling	J.80.B
COUPLING Hydraulic coupling	J.80.C

