

[Click here to get the complete manual](#)

**21F**

**121F**

**221F**

**321F**

**Tier 4B (final)**

**Compact Wheel Loader**

## **SERVICE MANUAL**

**Part number 47829079B**

2<sup>nd</sup> edition English

May 2015

*Replaces part number 47829079*

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**121F XT , 121F ZB , 21F XT , 21F ZB , 221F HS , 221F STD , 321F HS , 321F STD**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
Transmission.....	21
[21.135] Powershift transmission external controls.....	21.1
[21.160] Creeper .....	21.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.124] Final drive hub, steering knuckles, and shafts .....	27.4
Brakes and controls .....	33
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.204] Front axle brake .....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump .....	35.3
[35.106] Variable displacement pump .....	35.4
[35.359] Main control valve.....	35.5

[35.357] Pilot system .....	35.6
[35.600] High flow hydraulics .....	35.7
[35.353] Hydraulic travel system .....	35.8
[35.701] Front loader arm hydraulic system .....	35.9
[35.723] Front loader bucket hydraulic system .....	35.10
[35.734] Tool quick coupler hydraulic system .....	35.11
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Steering .....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components .....	41.2
[41.216] Cylinders .....	41.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.045] Front axle control system .....	55.3
[55.408] Warning indicators, alarms, and instruments .....	55.4
[55.DTC] FAULT CODES .....	55.5
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab .....	90.1