

[Click here to get the complete manual](#)

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
General		
		Tab 1
Section Index - General		7-12120
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-12131
Loctite Product Chart		8-98902
Engines		
		Tab 2
Section Index - Engines		7-12140
Engine and Radiator Removal and Installation - 621C	2000	7-12150
Engine and Radiator Removal and Installation - 721C	2000	7-12160
Stall Tests	2002	7-12171
For Engine Repair, See the Engine Service Manual		
Fuel System		
		Tab 3
Section Index - Fuel System		7-12180
For Fuel System Repair, See the Engine Service Manual		
Electrical		
		Tab 4
Section Index - Electrical		7-12190
Removal and Installation of Starter and Alternator - 621C	4001	7-12210
Removal and Installation of Starter and Alternator - 721C	4001	7-15380
Electrical Specifications and Troubleshooting	4002	7-12221
Batteries	4003	7-49440
Starter and Starter Solenoid - 621C	4004	7-12230
Starter and Starter Solenoid - 721C	4004	7-12240
Information and Diagnostic Center	4005	7-12251
Alternator	4007	7-12260
Steering		
		Tab 5
Section Index - Steering		7-12270
Removal and Installation of Steering Components	5001	7-12290
Steering Specifications, Pressure Checks, and Troubleshooting	5002	7-12300
Steering Control Valve	5003	7-12310
Steering Priority Valve	5004	7-12320
Steering Cylinders	5005	7-12330
Center Pivot	5006	7-12340

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train		Tab 6
Section Index - Power Train		7-12362
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	7-12391
Transmission - 621C	6003	7-12401
Transmission - 721C	6003	7-12411
621C Front and Rear Axle - 721C Rear Axle	6004	6-41400
721C Front Axle	6004	6-41410
Drive Shaft, Center Bearing, and Universal Joints	6005	7-12430
Wheels and Tires	6006	7-12440
Transmission Control Valve	6007	7-12450
Brakes		Tab 7
Section Index - Brakes		7-12460
Removal and Installation of Brake Components	7001	7-12480
Hydraulic Brake Troubleshooting	7002	7-12490
Brake Accumulators	7004	7-12510
Brake Actuator Valve	7005	7-12520
Brake Accumulator Valve	7007	7-12530
Parking Brake	7008	7-12540
NOTE: For parking brake and brake pedal adjustments, see Section 9001.		
Hydraulics		Tab 8
Section Index - Hydraulics		7-12550
Removal and Installation of Hydraulic Components	8001	7-12571
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-12581
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-12601
Loader Control Valve	8005	7-12611
Cylinders	8006	7-12620
Coupler Lock Valve	8007	7-12630
Remote Control Valves	8010	7-12640
Combination Valve	8011	7-12650
Accumulator for Ride Control	8013	7-13471
Solenoid Valve and Accumulator Valve for Ride Control	8014	7-13480

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Mounted Equipment		
	Tab 9	
Section Index - Mounted Equipment		7-12660
Pedals and Levers	9001	7-12670
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	7-14150
Air Conditioner System Service	9003	7-14160
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	7-14170
Air Conditioning Compressor and Clutch For Systems with HFC-134a Refrigerant	9005	7-14180
Loader	9006	7-12680
ROPS Cab and ROPS Canopy	9007	7-12690
Cab Glass Installation	9010	7-14290
621C - Hydraulic Schematic Foldout and Electrical Schematic Foldout	In Rear Pocket	7-12721
721C - Hydraulic Schematic Foldout and Electrical Schematic Foldout	In Rear Pocket	7-12731

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.