

[Click here to get the complete manual](#)

W11 ARTICULATED LOADER TABLE OF CONTENTS AND SERVICE MANUAL INTRODUCTION

Table of Contents

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
General Engine Specifications	1010	9-46091
Decals and Repainting	1012	9-67531
Detailed Engine Specifications	1026	9-78685
Maintenance and Lubrication	1050	9-67531
Torque Charts	1051	9-67531
20 SERIES - ENGINE		
Engine Diagnosis	2001	9-78875
Engine Tune-up	2002	9-78825
Cylinder Head, Valve Train and Camshaft	2015	9-78836
Crankshaft, Bearings, Flywheel and Oil Seals	2035	9-78866
Oil Pump	2045	9-78885
Stall Tests, Engine Removal and Installation and Radiator	2050	9-67531
Air Cleaner and Mufflers	2051	9-67531
Ether Injection	2053	9-67531
Cooling System	2055	9-78816
Cylinder Block, Sleeves, Pistons and Rods	2125	9-78845
Engine Lubrication	2555	9-78985
30 SERIES - FUEL SYSTEM		
Fuel Filters	3010	9-78785
Fuel Injection Pump	3012	9-78795
Fuel Injectors	3013	9-78806
Engine Controls, Fuel Lines and Fuel Tank	3052	9-67531
Electric Fuel Pump	3053	9-67531
40 SERIES - ELECTRICAL SYSTEM		
Electrical System Specifications and Trouble Shooting	4002	9-67532
Wiring Diagrams	4003	9-67531
Indicators and Gauges	4004	9-67531
Battery	4005	9-67531
Starter	4006	9-67531
Alternator	4007	9-67531
Electrical Accessories	4015	9-67531
50 SERIES - STEERING SYSTEM		
Hydraulic Diagram, Pressure Check and Trouble Shooting	5002	9-67532
Steering Control Valve	5007	9-67531
Steering Cylinder	5010	9-67531
Center Pivot	5023	9-67531

60	SERIES - POWER TRAIN		
	Transmission Maintenance and Trouble Shooting	6102	9-67531
	Charging Pump	6105	9-67531
	Transmission Control Valve	6107	9-67531
	Torque Converter	6110	9-67531
	Transmission	6116	9-67531
	Transmission Controls	6118	9-67531
	Drive Shafts, Center Bearing and Universal Joints	6120	9-67531
	Rear Axle Trunnion	6125	9-67531
	Front and Rear Axle	6126	9-67532
	Wheels and Tires	6129	9-67532
70	SERIES - BRAKES		
	Brake System Operation, Brake Actuator and Brake Pedal Adjustment	7106	9-67532
	Brakes	7121	9-67532
	Parking Brake	7127	9-67531
80	SERIES - HYDRAULIC SYSTEM		
	Hydraulic Diagram, Maintenance, Trouble Shooting and Pressure Checks	8002	9-67532
	Hydraulic Pump	8005	9-67531
	Flow Control Valve	8006	9-67531
	Loader Control Valve	8007	9-67531
	Unloader Valve	8009	9-67531
	Cylinders	8090	9-67531
90	SERIES - MOUNTED EQUIPMENT		
	Loader	9010	9-67531
	ROPS Cab and ROPS Canopy	9061	9-67531