

W14B LOADER

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-42830
Fluids and Lubricants Chart, Maintenance Chart	1002	8-42830
General Engine Specifications	1010	8-27130
Detailed Engine Specifications	1024	8-26061
2 ENGINE		
Engine Removal and Installation, Radiator Removal and Installation	2000	8-42830
Engine Accessories (Air Cleaner, Ether Injection, Mufflers, Turbocharger)	2001	8-42830
Stall Tests	2002	8-24830
Cylinder Head and Valve Train	2415	8-26071
Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Oil Seals, Flywheel, and Crankshaft	2425	8-26081
Lubrication System	2445	8-26091
Cooling System	2455	8-26101
Turbocharger (Tear-down)	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Fuel lines, Fuel Tank, and Engine Controls	3001	8-42830
Fuel System and Filters	3410	8-26131
Bosch Fuel Injection Pump, Drive Gear Timing	3412	8-26141
Fuel Injectors	3413	8-26150
4 ELECTRICAL SYSTEM		
Removal and Installation of Electrical Components	4001	8-42830
Specifications and Troubleshooting	4002	8-42830
Wiring Diagrams	Rear Pocket	
Instrument Cluster and Optional Gauges	4004	8-42830
Batteries	4005	8-44360
Starter and Starter Solenoid	4006	8-42240
40 Ampere Alternator	4017	8-42830
65 Ampere Alternator	4018	8-42830
5 STEERING		
Removal and Installation of Steering Components	5000	8-42830
Troubleshooting and Pressure Check	5002	8-42830
Hydraulic Schematic	Rear Pocket	
Steering Control Valve	5007	8-42830
Flow Control Valve	5008	8-42830
Center Pivot	5023	8-42830
Auxiliary Steering Pump and Check Valve	5025	8-42830
Steering Cylinder	See Section 8090	

6 POWER TRAIN

Removal and Installation of Transmission, Axles, and Differentials	6100	8-42831
Maintenance	6101	8-42830
Troubleshooting and Pressure Checks	6102	8-42830
Torque Converter, Transmission, and Control Valve	6110	8-42830
Transmission Controls	6111	8-42830
Drive Shafts and Trunnions	6125	8-42830
Differential and Planetary	6126	8-42830
Wheels and Tires	6129	8-42831

7 BRAKES

Removal and Installation of Brake System Components	7100	8-42830
Specifications, Diagram, Troubleshooting, Leakage Tests, and Adjustments	7102	8-42830
Air Compressor and Governor	7103	8-42830
Reservoirs and Relief Valve	7104	8-42830
Brake Valve	7105	8-42830
Brake Actuator	7107	8-41150
Pressure Reducing Valve and Pressure Protection Valve	7109	8-41150
Air Horn and Air Valve	7110	8-41150
Disc Brake	7121	8-42830
Parking Brake Actuator and Parking Brake Valve	7126	8-41150

8 HYDRAULIC

Removal and Installation of Hydraulic System Components ...	8000	8-42830
Maintenance	8001	8-42830
Specifications, Troubleshooting and Pressure Checks	8002	8-42830
Hydraulic Diagram	Rear Pocket	
Cleaning the Hydraulic System	8003	8-42830
Pump	8005	8-42830
Loader Control Valve	8007	8-42830
Cylinders	8090	8-42830

9 MOUNTED EQUIPMENT

Air Conditioning Troubleshooting	9002	8-41150
Air Conditioning System	9003	8-42830
Loader	9010	8-42830
ROPS Cab and Canopy	9061	8-41150
Seat and Seat Belts	9064	8-41150
Noise Control	9201	8-42830

REAR POCKET

Electrical Schematic - Front Harness	860421
Electrical Schematic - Rear Harness	860422
Electrical Schematic - Cab	860423
Hydraulic Schematic	860228