

W30 LOADER

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-41150
Maintenance and Lubrication	1002	8-70340
General Engine Specifications	1010	8-25790
Detailed Engine Specifications	1320	8-20040
2 ENGINES		
Engine Stall Tests, Engine and Radiator Removal and Installation	2000	8-70830
Muffler, Air Cleaner, Ether Injection System, and Turbocharger	2001	8-41150
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	8-22560
Cylinder Block, Sleeves, Pistons, and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	9-76187
Lubrication System	2046	8-22780
Cooling System	2055	9-76337
Engine Troubleshooting	2201	8-20110
Reconditioning Engine Block	2290	8-21170
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Fuel Tank, Fuel Lines, and Engine Controls	3001	8-41150
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pump	3012	9-74937
17 mm Fuel Injectors	3213	8-20240
4 ELECTRICAL		
Removal and Installation of Electrical Components	4000	8-70840
Electrical System Specifications and Troubleshooting	4002	8-70350
Electrical Schematics	4003	8-70360
Instrument Cluster and Optional Gauges	4004	8-41150
Batteries	4005	8-44360
Alternator - 40 Ampere Delco-Remy	4007	8-41150
Alternator - 65 Ampere Delco-Remy	4008	8-41150
Alternator - Bosch	4019	8-42851
Starter - Delco-Remy 1114872	4020	8-70850
Starter - Delco-Remy 1193797	4022	8-70860
5 STEERING		
Steering System Troubleshooting and Pressure Checks	5002	8-70870
Removal and Installation of Steering System Components	5003	8-41150
Steering Control Valve	5007	8-70880
Steering Cushion Valve, Flow Control Valve	5008	8-41150
Center Pivot	5023	8-70890
Auxiliary Steering Pump and Check Valve	5025	8-70900
Steering Cylinder	See Section 8090	

Reprinted

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Transmission Maintenance	6101	8-70910
Allison and Twin Disc Transmission Troubleshooting and Pressure Checks	6102	8-70370
Allison and Twin Disc Transmission Operation	6103	8-70380
Transmission Removal and Installation	6109	8-70390
Allison and Twin Disc Transmission Disassembly and Assembly	6110	8-70400
ZF Transmission Disassembly and Assembly	6111	8-70410
Hydraulic Troubleshooting for ZF Transmissions	6112	8-72560
Transmission Controls	6118	8-70420
Drive Shafts and Trunnion	6125	8-41150
Axles and Differentials	6126	8-70940
Wheels and Tires	6129	8-70950
7 BRAKES		
Air System Operation and Diagram	7101	8-70960
Removal and Installation of Brake System Components	7102	8-71040
Air Compressor, Governor, Reservoir, and Safety Valve	7103	8-41150
Brake Valve, Double Check Valve, and Stoplamp Switch	7105	8-41150
Brake Actuator	7107	8-41150
Pressure Reducing Valve and Pressure Protection Valve	7109	8-41150
Air Horn and Air Horn Valve	7110	8-41150
Alcohol Evaporator	7111	8-41150
Disc Brakes	7121	8-41150
Parking Brake Actuator and Parking Brake Valve	7126	8-70970
8 HYDRAULICS		
Hydraulic System Specifications, Diagrams, Maintenance, Troubleshooting, and Pressure Checks	8002	8-70980
Cleaning the Hydraulic System	8003	8-41150
Removal and Installation of Hydraulic System Components	8004	8-70990
Loader and Steering Pump	8005	8-71000
Loader Control Valve	8007	8-41150
Unloading Valve	8008	8-41150
Remote Control Valves, Pressure Reducing Valve, and Accumulator	8009	8-41150
Remote Control Valves	8010	8-72080
Cylinders	8090	8-41150
9 CHASSIS/MOUNTED EQUIPMENT		
Air Conditioning Troubleshooting	9002	8-41150
Air Conditioning System	9003	8-41150
Loader	9010	8-71030
Cab and Canopy	9061	8-41150
Operators Seat and Seat Belts	9064	8-41150
Decals, Painting, and Noise Control	9201	8-41150
REAR POCKET		
Electrical Schematics		
Rear Chassis, Machines with Allison or Twin Disc Transmission		B871753
Front Chassis, Machines with Allison or Twin Disc Transmission		B871752
Rear Chassis, Machines with ZF Transmission		B871755
Front Chassis, Machines with ZF Transmission		B871754
Cab		B871756
Air System Diagram		850028A
Hydraulic System Schematic		841469A