

[Click here to get the complete manual](#)

SERVICE MANUAL  
Loader  
W36  
9-66874

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL  
Loader  
W36  
9-66874

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL  
Loader  
W36  
9-66874

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL  
Loader  
W36  
9-66874

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

# W36 LOADER TABLE OF CONTENTS AND SERVICE MANUAL INTRODUCTION

## Table of Contents

SERIES/SECTION	SECTION NO.	FORM NO.
<b>10 SERIES - GENERAL</b>		
General Engine Specifications .....	1010	9-45982
Decals and Repainting .....	1012	9-66871
Detailed Engine Specifications .....	1020	9-45991
Maintenance and Lubrication .....	1050	9-66873
Torque Charts .....	1051	9-66871
 <b>20 SERIES - ENGINE</b>		
Engine Diagnosis .....	2001	9-76365
Engine Tune-Up .....	2002	9-76379
Cylinder Head, Valve Train and Camshaft .....	2015	9-76166
Cylinder Block, Sleeves, Pistons and Rods .....	2025	9-76176
Crankshaft, Main Bearings, Flywheel and Oil Seals .....	2035	9-76185
Lubrication System .....	2045	9-78046
Stall Tests, Engine Removal and Installation and Radiator .....	2050	9-66871
Air Cleaner .....	2051	9-66871
Ether Injection .....	2053	9-66871
Cooling System .....	2055	9-78157
Turbocharger .....	2065	9-66871
Reconditioning Large Bore Case Engine Blocks .....	2290	8-21170
Engine Lubrication .....	2555	9-78385
Turbocharger Failure Analysis .....	2565	9-78235
 <b>30 SERIES - FUEL SYSTEM</b>		
Fuel System and Filters .....	3010	9-75297
Robert Bosch Fuel Injection Pumps .....	3012	9-74937
Engine Controls, Fuel Lines and Fuel Tank .....	3052	9-66871
American Bosch 17 mm Fuel Injectors .....	3113	9-77756
 <b>40 SERIES - ELECTRICAL</b>		
Electrical System Specifications and Troubleshooting .....	4002	9-66871
Wiring Diagrams .....	4003	9-66872
Instrument Cluster .....	4004	9-66871
Batteries .....	4005	9-66871
Starter, Starter Solenoid and Magnetic Switches .....	4006	9-66871
Alternator .....	4007	9-66871
Electrical Accessories .....	4015	9-66871
 <b>50 SERIES - STEERING SYSTEM</b>		
Hydraulic Diagrams, Pressure Check and Troubleshooting .....	5002	9-66871
Steering System Relief Valve .....	5006	9-66871
Steering Control Valve .....	5007	9-66871
Steering Cylinders .....	5010	9-66871
Center Pivot .....	5023	9-66872

**Reprinted**

SERIES/SECTION	SECTION NO.	FORM NO.
60	SERIES - POWER TRAIN	
	Clark Four-Speed Transmission	SM284
	Transmission Maintenance and Troubleshooting ..... 6102	9-66872
	Auxiliary Lubrication Pump ..... 6105	9-66871
	Transmission Removal and Installation ..... 6115	9-66871
	Removing and Installing Oil Tubes in the Transmission	
	Housing and Torque Converter Housing ..... 6116	9-66871
	Transmission Controls ..... 6118	9-66871
	Drive Shafts, Center Bearing and Universal Joints ..... 6120	9-66871
	Rear Axle Trunnion ..... 6125	9-66871
	Rockwell Axle ..... 6126	9-66872
	GKN Axle ..... 6127	9-66871
	Wheels and Tires ..... 6129	9-66871
70	SERIES - BRAKES	
	Air System Diagram, General Information and Releasing Air from the Air Reservoirs ..... 7102	9-66871
	Air Compressor, Governor, Air Reservoirs and Moisture Ejection Valve ..... 7103	9-66871
	Brake Control Valve ..... 7105	9-66871
	Brake Actuator ..... 7107	9-66871
	Pressure Protection Valve and Pressure Reducing Valve ..... 7109	9-66871
	Air Horn and Horn Valve ..... 7110	9-66871
	Alcohol Evaporator ..... 7111	9-66871
	Double Check Valve/Stoplight Switch ..... 7112	9-66871
	Disc Brakes ..... 7121	9-66872
	Parking Brake ..... 7126	9-66871
80	SERIES - HYDRAULIC SYSTEM	
	Hydraulic Diagram, Maintenance, Troubleshooting and Pressure Checks ..... 8002	9-66872
	Hydraulic Power Assist - Remote Control Valves, Accumulator, Pressure Reducing Valve ..... 8003	9-66871
	Hydraulic Pump ..... 8005	9-66871
	Loader Control Valve for Machines Without Hydraulic Power Assist ..... 8007	9-66872
	Loader Control Valve for Machines With Hydraulic Power Assist ..... 8007A	9-66871
	Cylinders ..... 8090	9-66871
90	SERIES - MOUNTED EQUIPMENT	
	Air Conditioning Troubleshooting and System Checks ..... 9002	9-67221
	Air Conditioning System ..... 9003	9-66871
	Loader ..... 9010	9-66872
	ROPS Cab and Canopy ..... 9061	9-67221