Service Manual



Wheeled Loading Shovel - 427, 437 and 457

Section 1 - General Information

Section 2 - Care and Safety

Section 3A - Routine Maintenance

Section 3B - Routine Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section E - Hydraulics

Section F - Transmission

Section G - Brakes

Section H - Steering

Section K - Engine



Publication No. 9813-1600-4



World Class



Section 1 - General Information

Contents Page No.

1-ii 1-ii